 



F71

Glass crystal white
玻璃水晶白

调光开关
Speed control switch

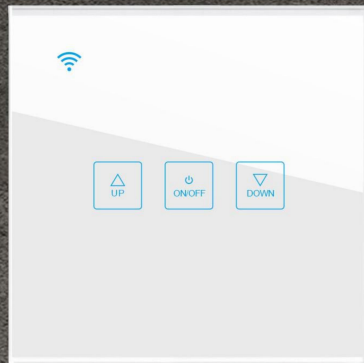

 147组合演示 147 Combination demo

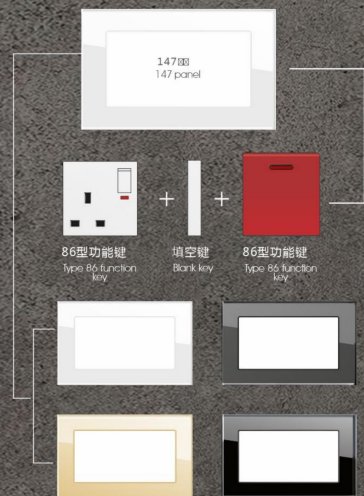


控制回路：调光开关(零火线)
产品分类：WIFI开关,WIFI+RF开关,ZIGBEE开关
工作电压：100V~240V~,50Hz/60Hz
工作电流：2A Max(纯阻性负载)
负载类型：总负载低于400W
产品材质：钢化玻璃面板+阻燃PC外壳
尺寸(高*宽*厚)：86mm*86mm*34mm
使用环境：温度0℃~40℃,相对湿度小于95%
无线频率：2.4GHz 433.92MHz

Control loop: Speed control switch (zero live line)
Product classification: WIFI switch, WIFI + RF switch, ZigBee switch
Working voltage: 100V ~ 240V ~, 50 Hz / 60 Hz
Working current: 2A max (pure resistive load)
Load type: total load less than 400W
Product material: toughened glass panel + flame retardant PC shell
Size (height * width * thickness): 86mm * 86mm * 34mm
Use environment: temperature 0 °C ~ 40 °C, relative humidity less than 95%
Wireless frequency: 2.4GHz 433.92MHz


联体产品 Conjoined products



 水晶白 Crystal White



香槟金 Champaign Gold

 



 





 
 




 
 











 





 





 





 














暗灰色 Dark Gray



爵士黑 Jazz Black

F71 Glass crystal white

 <p>F71-0001 一位触摸开关(零火线) 1 gang 1 way touch switch 蓝牙WiFi二位触摸开关(零火线) 1 gang 1 way touch switch 涂鸦Zigbee一位触摸开关(零火线) 1 gang 1 way touch switch</p> <p>¥:400.00 ¥:500.00 ¥:600.00</p>	 <p>F71-0011 一位开关+USB带13A方角插座 1 gang switch and 13A square pin socket</p> <p>¥:295.00</p>	 <p>F71-0021 小板16A拨动一位开关单控 1 gang 1 way toggle switch 小板16A拨动一位开关双控 1 gang 2 way toggle switch</p> <p>¥:175.00 ¥:180.00</p>	 <p>F71-0031 小板16A以色列插座 Israel socket</p> <p>¥:175.00</p>	 <p>F71-0041 小板10A二位插座 10A Double 2 pole socket</p> <p>¥:155.00</p>	 <p>F71-0051 小板带欧式六孔插座 Dislocation Thai 6 pin socket</p> <p>¥:165.00</p>
 <p>F71-0002 一位触摸开关(零火线) 2 gang 1 way touch switch 蓝牙WiFi二位触摸开关(零火线) 2 gang 1 way touch switch 涂鸦Zigbee二位触摸开关(零火线) 2 gang 1 way touch switch</p> <p>¥:450.00 ¥:550.00 ¥:650.00</p>	 <p>F71-0012 小板16A一位开关单控 16A 1 gang 1 way switch 小板16A一位开关双控 16A 1 gang 2 way switch 小板16A一位开关多控 16A 1 gang more way switch</p> <p>¥:118.00 ¥:121.00 ¥:158.00</p>	 <p>F71-0022 小板16A拨动二位开关单控 2 gang 1 way toggle switch 小板16A拨动二位开关双控 2 gang 2 way toggle switch</p> <p>¥:190.00 ¥:200.00</p>	 <p>F71-0032 小板16A意大利+德式插座 Italy+German socket</p> <p>¥:175.00</p>	 <p>F71-0042 小板10A一位开关带二位插座 1 gang switch and 2 pole socket</p> <p>¥:155.00</p>	 <p>F71-0052 小板一位开关带13A方角插座 1 gang switch and 13A square pin socket</p> <p>¥:158.00</p>
 <p>F71-0003 三位触摸开关(零火线) 3 gang 1 way touch switch 蓝牙WiFi三位触摸开关(零火线) 3 gang 1 way touch switch 涂鸦Zigbee三位触摸开关(零火线) 3 gang 1 way touch switch</p> <p>¥:500.00 ¥:600.00 ¥:700.00</p>	 <p>F71-0013 小板16A二位开关单控 16A 2 gang 1 way switch 小板16A二位开关双控 16A 2 gang 2 way switch 小板16A二位开关多控 16A 2 gang more way switch</p> <p>¥:138.00 ¥:144.00 ¥:210.00</p>	 <p>F71-0023 小板16A拨动三位开关单控 3 gang 1 way toggle switch 小板16A拨动三位开关双控 3 gang 2 way toggle switch</p> <p>¥:205.00 ¥:220.00</p>	 <p>F71-0033 大板16A三极插座 16A 3 pole socket</p> <p>¥:130.00</p>	 <p>F71-0043 小板10A一位开关带二位插座 1 gang switch and 4 pole socket</p> <p>¥:165.00</p>	 <p>F71-0053 小板一位开关带15A圆孔插座 1 gang switch and 15A 3 round pins socket</p> <p>¥:163.00</p>
 <p>F71-0004 四位触摸开关(零火线) 4 gang 1 way touch switch 蓝牙WiFi四位触摸开关(零火线) 4 gang 1 way touch switch 涂鸦Zigbee四位触摸开关(零火线) 4 gang 1 way touch switch</p> <p>¥:550.00 ¥:650.00 ¥:750.00</p>	 <p>F71-0014 小板16A三位开关单控 16A 3 gang 1 way switch 小板16A三位开关双控 16A 3 gang 2 way switch</p> <p>¥:158.00 ¥:167.00</p>	 <p>F71-0024 小板16A拨动四位开关单控 4 gang 1 way toggle switch 小板16A拨动四位开关双控 4 gang 2 way toggle switch</p> <p>¥:220.00 ¥:240.00</p>	 <p>F71-0034 大板10A三极插座 10A 3 pole socket</p> <p>¥:125.00</p>	 <p>F71-0044 小板16A多功能三极插座 16A 3 pin universal socket</p> <p>¥:138.00</p>	 <p>F71-0054 小板一位开关带16A多功能插座 1 gang switch and 3 pin MF socket</p> <p>¥:163.00</p>
 <p>F71-0005 调光开关(零火线) Dimming switch (zero live wire) WiFi调光开关 WiFi dimming switch Zigbee调光开关 Zigbee dimming switch</p> <p>¥:600.00 ¥:700.00 ¥:800.00</p>	 <p>F71-0015 小板16A四位开关单控 16A 4 gang 1 way switch 小板16A四位开关双控 16A 4 gang 2 way switch</p> <p>¥:178.00 ¥:190.00</p>	 <p>F71-0025 小板10A双极开关带指示灯 20A switch with indicator light 小板45A双极开关带指示灯 45A switch with indicator light</p> <p>¥:187.00 ¥:226.00</p>	 <p>F71-0035 大板10A带二位三极插座 10A two or three pole socket</p> <p>¥:130.00</p>	 <p>F71-0045 小板13A三极多功能插座 5 pin multi-function socket (带指示灯)</p> <p>¥:150.00</p>	 <p>F71-0055 小板一位开关带13A方角插座 (带指示灯) 1 gang switch and 13A square pin socket</p> <p>¥:158.00</p>
 <p>F71-0006 调速开关(零火线) Speed control switch (zero live line) WiFi调速开关 WiFi speed control switch Zigbee调速开关 Zigbee speed control switch</p> <p>¥:600.00 ¥:700.00 ¥:800.00</p>	 <p>F71-0016 小板16A三位开关多控 Small panel 16A 3 gang 3 way switch</p> <p>¥:230.00</p>	 <p>F71-0026 小板45A双极开关带指示灯 45A switch with indicator light</p> <p>¥:226.00</p>	 <p>F71-0036 大板10A二位三极插座 10A 7 pole socket</p> <p>¥:135.00</p>	 <p>F71-0046 小板13A三极带多功能插座 (带指示灯) 5 pin multi-function socket (带指示灯)</p> <p>¥:166.00</p>	 <p>F71-0056 小板一位开关带15A圆孔插座 (带指示灯) 1 gang switch and 15A 3 round pins socket</p> <p>¥:163.00</p>
 <p>F71-0007 窗帘开关(零火线) Curtain switch (zero live wire) WiFi窗帘开关 WiFi curtain switch Zigbee窗帘开关 Zigbee curtain switch</p> <p>¥:600.00 ¥:700.00 ¥:800.00</p>	 <p>F71-0017 小板16A百叶窗升降开关 lower window filter switch</p> <p>¥:175.00</p>	 <p>F71-0027 小板16A幕帘门复位开关 Shutter reset switch</p> <p>¥:195.00</p>	 <p>F71-0037 小板10A一位开关带16A三极插座 1 gang 1 way switch and 16A 3 pole socket ¥:160.00 小板16A一位开关带16A三极插座 1 gang 2 way switch and 16A 3 pole socket ¥:163.00</p>	 <p>F71-0047 小板13A方角插座 13A square corner socket</p> <p>¥:138.00</p>	 <p>F71-0057 小板一位开关带16A多功能插座 (带指示灯) 1 gang switch and 3 pin MF socket(with neon)</p> <p>¥:163.00</p>
 <p>F71-0008 大板一位开关带16A多功能插座 1 gang switch and 3 pin multi-purpose socket</p> <p>¥:163.00</p>	 <p>F71-0018 小板16A门控开关 gating switch</p> <p>¥:142.00</p>	 <p>F71-0028 小板16A德式插座 German socket</p> <p>¥:163.00</p>	 <p>F71-0038 大板一位开关带10A二位三极插座 1 gang 2 way switch and 5 pole socket ¥:160.00 大板一位开关带10A二位三极插座 1 gang 2 way switch and 5 pole socket ¥:163.00</p>	 <p>F71-0048 小板18A圆角插座 15A 3 round pins socket</p> <p>¥:155.00</p>	 <p>F71-0058 小板一位开关带13A多功能五孔插座 (带指示灯) 1 gang switch and 5 pin multi-function socket</p> <p>¥:178.00</p>
 <p>F71-0009 大板一位开关带13A方角插座 1 gang switch and 13A square pin socket</p> <p>¥:158.00</p>	 <p>F71-0019 小板16A英式门控开关 British gating switch</p> <p>¥:142.00</p>	 <p>F71-0029 小板16A法式插座 French socket</p> <p>¥:163.00</p>	 <p>F71-0039 小板10A二位开关单控带二三极插座 2 gang 1 way switch and 5 pole socket ¥:180.00 小板10A二位开关双控带二三极插座 2 gang 2 way switch and 5 pole socket ¥:186.00</p>	 <p>F71-0049 小板15A泰式插座 15A Thai flat American standard socket</p> <p>¥:158.00</p>	 <p>F71-0059 小板16A法式插座带二位USB 2 USB with German socket</p> <p>¥:230.00</p>
 <p>F71-0010 大板一位开关带16A多功能带二位USB 1 gang switch with 16A 3pin multi-function with 2USB</p> <p>¥:290.00</p>	 <p>F71-0020 小板16A门铃开关 doorbell switch</p> <p>¥:142.00</p>	 <p>F71-0030 小板16A俄式插座 Russian socket</p> <p>¥:163.00</p>	 <p>F71-0040 小板10A三极插座 10A 3 pole socket</p> <p>¥:140.00</p>	 <p>F71-0050 小板15A泰式多功能三极插座 15A Thai type multi-function 3 pole socket</p> <p>¥:158.00</p>	 <p>F71-0060 小板16A法式插座带二位USB 2 USB with French socket</p> <p>¥:230.00</p>

F71 Glass crystal white 玻璃水晶白



F71-0061
小板16A德式插座+USB/Type-c
Small board 16A German socket
+ USB / type-c
¥:230.00



F71-0062
小板16A法式插座+USB/Type-c
Small board 16A French socket
+ USB / type-c
¥:230.00



F71-0063
小板16A一位开关带德式插座
1 gang German socket
¥:175.00



F71-0064
小板16A一位开关带法式插座
1 gang French socket
¥:175.00



F71-0065
小板16A德式插座带防水
German socket and Waterproof belt
¥:175.00



F71-0066
小板16A法式插座带防水
French socket and Waterproof belt
¥:175.00



F71-0067
小板二位USB带13A方角插座(横)
2 USB with 13A square corner
socket with switch
¥:230.00



F71-0068
小板15A美标插座带USB+TYPE-C
American Standard with USB+type-C
¥:230.00



F71-0069
小板15A泰式插座带USB+TYPE-C
15A Thai MF socket with USB+type-C
¥:230.00



F71-0070
小板二位USB带13A方角插座
(带指示灯)
2 USB with 13A square corner
socket with flip cover
¥:265.00



F71-0071
小板二位USB带13A多功能插座
(带指示灯)
2 USB with 1 pin multi-purpose socket
with flip cover
¥:265.00



F71-0072
小板一位开关带二位USB带
13A多功能插座(带指示灯)
1 gang switch with 2USB and
13A multi-function socket
¥:240.00



F71-0073
小板一位开关带二位USB带
13A方角插座(带指示灯)
1 gang switch with 2USB square socket
with 13A multi-function socket
with light
¥:240.00



F71-0074
小板13A多功能带Type-c+USB
13A multi-function with type-C
+ USB
¥:230.00



F71-0075
小板13A方带Type-c+USB
13A square angle band type-C
+ USB
¥:230.00



F71-0076
小板一位开关13A多功能插座带
Type-c+USB(带指示灯)
1 gang switch 13A multi-purpose
socket with Type-c+USB(with light)
¥:240.00



F71-0077
小板二位USB带13A多功能插座
带小开关(竖)
2 USB with Three very multi-purpose
socket with switch
¥:240.00



F71-0078
小板一位开关13A方角插带
Type-c+USB(带指示灯)
1 gang switch 13A square insert belt
type-c+USB(with light)
¥:240.00



F71-0079
小板二位USB带13A方角插座
带小开关(竖)
2 USB with 13A square corner
socket with switch
¥:240.00



F71-0080
小板15A泰式多功能插座带二
位USB
15A Thai multi-function socket
with 2-bit USB
¥:230.00



F71-0081
小板15A泰式+2USB
15A Thai + 2USB
¥:230.00



F71-0082
小板二位USB带13A多功能插座(横)
2 USB with 3 pin multi-purpose socket
¥:230.00



F71-0083
小板二位USB带10A二极插座
2 USB and 5 pin socket
¥:220.00



F71-0084
小板二位USB带10A二极
插座带开关
2 USB and 5 pin socket with switch
¥:230.00



F71-0085
10A二极五孔带USB+TYPE-C 2.1A
10A 5 pole socket with USB+type-c 2.1A
¥:240.00
10A二极五孔带USB+TYPE-C 4A
10A 5 pole socket with USB+type-c 4A
¥:360.00



F71-0086
小板一位开关带13A多功能五孔
插座带USB
1 gang switch and 5 pin multi-function
socket with USB and indicator light
¥:290.00



F71-0087
小板13A二位USB带多功能五孔插座
2 USB with 5 pin multi-function socket
¥:230.00



F71-0088
小板13A二位USB带多功能五孔
插座带开关
2 USB with 5 pin multi-function socket
with switch
¥:240.00



F71-0089
小板13A多功能五孔带USB+Type-c 2.1A
¥:240.00
小板13A多功能五孔带USB+Type-c 4A
13A MF 5 pin socket with USB+type-c 4A
¥:360.00



F71-0090
小板一位电视插座
TV socket
¥:155.00



F71-0091
小板一位电话插座 ¥:155.00
小板一位电脑插座 ¥:165.00
小板一位电脑插座(超六类) ¥:218.00
computer socket(6)



F71-0092
小板双电视插座
Two TV socket
¥:175.00



F71-0093
小板双电话插座 ¥:175.00
小板双电视插座 ¥:195.00
小板双电脑插座(超六类) ¥:245.00
小板电话电脑插座(6) ¥:185.00
电话+电脑插座 ¥:235.00
小板电话电脑插座(超六类) ¥:235.00
telephone+computer socket(6)



F71-0094
小板电视电话插座 ¥:175.00
TV + telephone socket
小板电视电脑插座 ¥:185.00
TV + computer socket
小板电视电脑插座(超六类) ¥:235.00
TV + computer socket(6)



F71-0095
小板电话带USB插座 ¥:320.00
TEI + USB socket
小板电脑带USB插座 ¥:320.00
computer + USB socket
小板电脑带USB插座(超六类) ¥:370.00
computer + USB socket(6)



F71-0096
小板一位TV+FM
TV and FM
¥:230.00



F71-0097
小板一位卫星插座
Satellite socket
¥:165.00



F71-0098
小板二位卫星插座
Double satellite socket
¥:195.00



F71-0099
小板卫星+电视插座
Satellite and TV socket
¥:185.00



F71-0100
小板卫星带电视插座 ¥:185.00
Satellite and telephone socket
小板卫星带电脑插座 ¥:195.00
Satellite and computer socket
小板卫星带电脑插座(超六类) ¥:245.00
Satellite and computer socket(6)



F71-0101
小板二极插座带电视插座
2 pin socket with TV
¥:320.00



F71-0102
小板二极插座带电话插座 ¥:320.00
2 pin socket with telephone
小板二极插座带电脑插座 ¥:320.00
2 pin socket with computer
小板二极插座带电脑插座(超六类) ¥:370.00
2 pin socket with computer



F71-0103
小板一位光纤插座
Optical fiber socket
¥:195.00



F71-0104
小板二位USB插座
Double USB socket
¥:265.00



F71-0105
小板单联音响插座
Single audio socket
¥:225.00



F71-0106
小板双联音响插座
Double audio socket
¥:305.00



F71-0107
触摸延时开关(节能)
Touch delay delay switch
(energy saving)
¥:225.00



F71-0108
声光控制延时开关(节能)
Sound-light controlled delay switch
(energy saving)
¥:225.00



F71-0109
红外无线人体感应开关
Human body induction
¥:300.00



F71-0110
凹型地脚灯(亮光/暖光)
The footlights
¥:260.00



F71-0111
凹型红外线人体感应地脚灯(亮光/暖光)
The human body induction footlights
¥:330.00



F71-0112
平面地脚灯(亮光/暖光)
Footlights
¥:260.00



F71-0113
叮咛门铃
Ding dong doorbell
¥:291.00



F71-0114
机械式40A插卡取电
Mechanical card for electricity
Double USB socket ¥:320.00
插卡取电低频率感应卡取电 ¥:490.00
Low frequency induction card for electricity
感应式高频率40A插卡取电 ¥:590.00
High frequency induction card for electricity



F71-0115
紧急呼叫开关
Emergency call switch
¥:280.00



F71-0116
请勿打扰请即清理门铃开关
(按钮式)
Do not disturb, please namely clearing
please + later doorbell "button"
¥:323.00



F71-0117
请勿打扰门铃开关
(按钮式)
Do not disturb + doorbell "button"
¥:475.00



F71-0118
请勿打扰请即清理门铃开关
(按钮式)
Do not disturb please
namely clearing please "button"
¥:475.00



F71-0119
智能音乐控制开关
Intelligence music control switch
¥:750.00



F71-0120
温控调节开关
Temperature control switch
¥:780.00

F71 Glass crystal white 玻璃水晶白



F71-0121
温度控制调节开关
Temperature control switch
¥:330.00



F71-0122
调音开关
Tuning switch
¥:300.00



F71-0123
调光开关300W
Dimming 300W
调光开关600W
Dimming 600W
调光开关1000W
Dimming 1000W
¥:220.00
¥:250.00
¥:280.00



F71-0124
调速开关300W
Speed 300W
调速开关600W
Speed 600W
调速开关1000W
Speed 1000W
¥:220.00
¥:250.00
¥:280.00



F71-0125
一位开关带调光开关500W
1 gang with dimmer switch
¥:235.00



F71-0126
一位开关带调速开关500W
1 gang with speed switch
¥:235.00



F71-0127
13A开关带保险丝 (带指示灯)
13A switch with fuse(with neon)
¥:265.00



F71-0128
20A出线柱
20A outgoing post
¥:245.00



F71-0129
剃须插座
Shaving socket
¥:500.00



F71-0130
USB+电脑插座+无线路由
USB+computer socket wireless router
¥:900.00



F71-0131
蓝牙+3.5音频+二位USB+HDMI
Bluetooth audio+3.5+2USB+HDMI
¥:5300.00



F71-0132
HDMI
¥:320.00



F71-0133
USB+TYPE-C
¥:360.00



F71-0134
HDMI+USB
¥:320.00



F71-0135
HDMI+USB+3.5音频
HDMI+USB+3.5
¥:320.00



F71-0136
VGA+USB+3.5音频
VGA+USB+3.5
¥:320.00



F71-0137
AV+3.5音频
AV+3.5
¥:320.00



F71-0138
VGA+AV音频接口
VGA+AV audio interface
¥:320.00



F71-0139
HDMI+AV音频接口
HDMI+AV audio interface
¥:320.00



F71-0140
二分之一AV音频+卫星
Half AV audio interface+
Satellite socket
¥:320.00



F71-0141
二分之一AV音频+USB+3.5音频
Half AV audio interface+USB+3.5
¥:320.00



F71-0142
二分之一VGA+TV
Half VGA+TV
¥:320.00



F71-0143
二分之一VGA+电脑插座
Half VGA+computer socket
¥:320.00



F71-0144
VGA+USB
¥:320.00



F71-0145
VGA+HDMI
¥:320.00



F71-0146
45A出线柱
45A Outlet
¥:275.00



F71-0147
德式插座带开关 (WiFi版)
German socket with switch
(WiFi version)
¥:670.00



F71-0148
法式插座带开关 (WiFi版)
French socket with switch
(WiFi version)
¥:670.00



 
F71-0149
13A多功能插座带开关 (WiFi版)
13A multi-functional socket with switch
(WiFi version)
¥:700.00



F71-0150
13A方角插座带开关 (WiFi版)
13A square corner socket with switch
(WiFi version)
¥:700.00




F71-0151
空白面板
Blank plate
¥:113.00



F71-0152
大板147型二位双极开关带二位
13A方角插座
147 type two position bipolar switch
with double 13A square socket
¥:295.00



 F71-0153
大板147型二位双极开关带二位13A多
功能插座
147 two switch and double 13A
multi-purpose socket
¥:295.00



F71-0154
大板147型二位双极开关带13A
方角二位USB
147 two bipolar switch and double
13A square plug+2USB
¥:435.00



F71-0155
大板147型二位开关带13A多功
能二位USB
147 two switch and double 13A
MF+2USB socket
¥:435.00



F71-0156
小板147型二位开关单控
147 2 gang 1 way switch
¥:236.00
小板147型二位开关双控
147 2 gang 2 way switch
¥:242.00



F71-0157
小板147型三位开关单控
147 3 gang 1 way switch
¥:256.00
小板147型三位开关双控
147 3 gang 2 way switch
¥:265.00



F71-0158
小板147型四位开关单控
147 4 gang 1 way switch
¥:276.00
小板147型四位开关双控
147 4 gang 2 way switch
¥:288.00



F71-0159
小板147型五位开关单控
147 5 gang 1 way switch
¥:296.00
小板147型五位开关双控
147 5 gang 2 way switch
¥:311.00



F71-0160
小板147型六位开关单控
147 6 gang 1 way switch
¥:311.00
小板147型六位开关双控
147 6 gang 2 way switch
¥:334.00



 
F71-0161
小板147型七位开关单控
147 7 gang 1 way switch
¥:336.00
小板147型七位开关双控
147 7 gang 2 way switch
¥:357.00




F71-0162
小板147型八位开关单控
147 8 gang 1 way switch
¥:356.00
小板147型八位开关双控
147 8 gang 2 way switch
¥:380.00




F71-0163
147 二位16A多功能三极插座
147 Double 16A MF socket
¥:276.00



 F71-0164
147 二位13A多功能五孔插座
147 Double 5 pin multi-function
socket
¥:312.00



 
F71-0165
小板147型二位15A美标插
座
147 Double 15A triode flat
American standard socket
¥:310.00




F71-0166
小板147型二位13A美式
三极插座
147 Double 13A triode flat
American standard socket
¥:310.00



 F71-0167
147 二位13A方角插座
147 Double 13A square corner
socket
¥:276.00



 F71-0168
147 二位15A圆孔插座
147 two switch double 13A round
pins socket
¥:310.00



F71-0169
小板147型二位13A错位多功能
五孔插座
147 type Double 13A dislocation
multi-function 5 hole socket
¥:332.00



 
F71-0170
147 二位10A二三极插座
147 Double position two and
three pole socket
¥:250.00




F71-0171
147 二位开关带二位13A方角插座
147 two switch and double 13A
square corner socket
¥:285.00



F71-0172
147 two switch with double 13A
MF socket
¥:285.00



 
F71-0173
147 二位开关带二位五孔多功能
插座
147 two switch and double 5 pin
MF socket
¥:315.00



F71-0174
147 二位开关带二位13A方角
插座(带指示灯)
147 low switch and double 13A
square corner socket with indicator
light
¥:295.00



 
F71-0175
147 二位开关带二位13A多功
能插座 (带指示灯)
147 low switch and double 13A
MF socket with light
¥:295.00



F71-0176
147 二位开关二位13A方角+二位
USB (小板)
147 low switch and double 13A
square corner socket+2USB
¥:385.00



 
F71-0177
147 二位开关二位13A多功能
+二位USB (小板)
147 two switch and double 13A
MF socket+2USB
¥:385.00



F71-0178
147 二位开关二位13A方角插
+USB/Type-c
147 two switch double 13A square
band lamp+USB/type-c
¥:385.00




 F71-0179
147 二位开关二位13A多功能插
带灯+USB/Type-c
147 two switch double 13A MF
socket+USB/type-c
¥:385.00



F71-0180
147 二位开关带二位15A圆角插座
(带指示灯)
147 low switch and double 15A 3
round pins socket with indicator light
¥:326.00

 F71 Glass crystal white 玻璃水晶白



F71-0181
小板147型二位开关带二位13A方角插座(带指示灯)
147 two switch with double 13A square angle socket (with indicator light)
¥:326.00



F71-0191
147型二位德式带USB+type-c(模块)
147 double German + USB / type-C (module)
¥:510.00



F71-0201
147 二位开关带二位13A多功能五孔插座+2USB(带指示灯)
147 two position switch with two position 13A multi-function five hole socket + 2 USB (with indicator)
13A square angle socket + 2USB
¥:580.00



F71-0182
147型二位倒须插座
147 two shoving socket
¥:680.00



F71-0192
147型二位法式带USB+type-c(模块)
147 double French + USB / type-C (module)
¥:510.00



F71-0202
147 二位13A双功能五孔插座+四孔USB
147 13A double 5 pin multi-function socket+4USB
¥:460.00



 
F71-0183
147 45A开关+一位开关16A多功能倒须带指示灯(带倒须带开关)
147 kitchen switch
¥:415.00



F71-0193
二位17A德式+二位USB(小板)
147 Double German with 2USB
¥:410.00




F71-0203
147 二位开关二位13A多功能五孔插座+四位USB
147 two switch double 5 pin multi-function socket+4USB
¥:480.00



F71-0184
147 45A开关+一位开关13A多功能倒须带指示灯(带倒须带开关)
147 kitchen switch
¥:415.00



 F71-0194
147 二位16A法式+2USB(小板)
147 Double French with 2USB
¥:410.00



F71-0204
147型二位开关带二位多功能五孔插座带USB+type-c
147 low switch and double 13A 3 round hole socket with indicator light
¥:550.00



 
F71-0185
147 45A开关+一位开关13A多功能倒须带指示灯(带倒须带开关)
147 kitchen switch
¥:415.00



F71-0195
147 四位USB插座
147 4 USB socket
¥:530.00




F71-0205
147型二位开关带二位13A多功能五孔插座+二位USB(带指示灯)
147 two switch and double 13A MF +4USB socket (with indicator light)
¥:480.00




F71-0186
147 45A双联开关带指示灯
147 type 45A bipolar switch
¥:360.00



 F71-0196
147 二位多功能插座+4USB
147 2-bit multi-function socket +4USB
¥:460.00



 F71-0206
147型二位13A方插带四位USB
147 type two switch two position 13A square inserting band 4 USB
¥:480.00



F71-0187
147 16A二位德式插座
147 Double German socket +4USB
¥:326.00



F71-0197
147 二位13A方角插座+4USB
147 two bit 13A square socket +4USB
¥:460.00



F71-0207
147 二位13A方插带四位USB
147 type double position 13A square inserting band 4 USB
¥:460.00



F71-0188
147 16A二位法式插座
147 Double French socket
¥:326.00



F71-0198
147 一位13A方角插座+二位USB
13A square corner socket and Two USB
¥:418.00



F71-0208
147 二位13A多功能+4USB(带盖板)
147 type multi-function + 4USB (with cover plate)
¥:530.00



F71-0189
147 16A二位德式插座
147 Double German socket
¥:326.00



 
F71-0199
147 一位16A多功能插座+二位USB
16A MF 3 pin socket and 2USB socket
¥:418.00




F71-0209
147型二位13A方插带四位USB
147 double 13A square inserting +4USB socket
¥:530.00



F71-0190
147 16A二位法式插座
147 Double French socket
¥:326.00



 F71-0200
147型二位开关带二位多功能五孔插座带双USB
147 Low switch and double 13A 5 pin multi purpose socket+2USB
¥:415.00




F71-0210
147 一开单控带13A多功能五孔插座
147 1 gang 1 way switch with 13A 5 pin MF socket
¥:274.00



F71-0211
147 一开单控带13A方角插座+双USB
147 1 gang 1 way socket with 13A square-angle socket +2USB
¥:348.00



 F71-0221
147 二开单控带16A多功能插座
147 two switch single control 16A MF 3 pin socket
¥:276.00



F71-0231
147型二位16A德式插座带16A多功能插座
147 double computer with 16A MF pin socket
¥:333.00



F71-0212
147 一开单控带15A泰式插座
147 one open single control with 15A Thai socket
¥:283.00



F71-0222
147型二开单控带13A方角插座
147 type double open single control socket with 13A square angle
¥:276.00



F71-0232
147型二位16A德式插座带防水
147 two position 16A German socket with waterproof
¥:350.00



F71-0213
147型一开单控带多功能五孔+双USB插座
147 one open single control and MF 5 pin + 2USB socket
¥:348.00



 
F71-0223
147型10A二极带10A二极插座
147 10A two pole with 10A two pole socket
¥:280.00



F71-0233
147型二位16A法式插座带防水
147 two position 16A French socket with waterproof
¥:350.00




F71-0214
147型一开单控带二位16A三极插座
147 type 2 gang 1 way switch double 16A three pole socket
¥:440.00




F71-0224
147型二位一开单控带二位16A三极插座
147 type 2 gang 1 way switch double 16A three pole socket
¥:320.00



 F71-0234
147 二位开关二位16A德式插座带指示灯+USB/type-c(小板)
147 double switch double German socket+USB/type-c with light
¥:550.00



 
F71-0215
147型二位13A多功能带二位USB插座
147 double 13A 3pin multi-function socket +4USB with small switch
¥:480.00



F71-0225
147型二位一开单控带二位10A二极插座
147 type 2 gang 1 way switch double 10A 5 pole socket
¥:320.00



 F71-0235
147 二位开关二位16A法式插座带指示灯+USB/type-c(小板)
147 double switch double French socket+USB/type-c with light
¥:550.00




F71-0216
147型二位13A方插带四位USB带小开关
147 double 13A square plug with 4USB with small switch
¥:480.00



F71-0226
147型二位10A二极插座 ¥:460.00
带USB+type-c 2.1A
147 type double 10A 5 pole socket USB + type-c 2.1A
147型二位10A二极插座 ¥:270.00
带USB+type-c 4A
147 type double 10A 5 pole socket USB + type-c 4A



 F71-0236
147 二位开关二位16A德式插座(带指示灯)
147 two switch double 16A German socket with light
¥:365.00



F71-0217
147 一位一开16A多功能带指示灯
147 type multi-function 16A MF 3 pin socket with neon
¥:326.00



 
F71-0227
147型二位多功能五孔插座 ¥:460.00
带USB+type-c 2.1A
147 type double 5 pin MF socket USB + type-c 2.1A
147型二位多功能五孔插座 ¥:270.00
带USB+type-c 4A
147 type double 5 pin MF socket USB + type-c 4A



F71-0237
147 二位开关二位16A法式插座(带指示灯)
147 two switch double 16A French socket with light
¥:365.00




F71-0218
147 二位多功能带四位USB
147 type multi-functional 4 USB band 4 USB
¥:460.00



F71-0228
147型13A多功能USB带五孔插座
147 type 13A multi-function USB with 5 pin multi-functional socket
¥:480.00



 F71-0238
147 二位开关二位16A德式插座带指示灯+二位USB
147 two switch double 16A German socket + 2usb with light
¥:450.00



F71-0219
147 16A多功能+方用五孔插座
147 16A MF 3 pin +MF 5 pin socket
¥:295.00



F71-0229
147型二开单控带二位16A法式插座
147 type double computer with 2USB socket
¥:460.00



F71-0239
147 二位开关二位16A法式插座带指示灯+二位USB(小板)
147 two switch double 16A French socket +2USB with light
¥:450.00



F71-0220
147 10A二极插座
10A 8 pole socket
¥:310.00



F71-0230
147型二位电话带二位电脑插座
147 double telephone with double computer socket
¥:390.00



F71-0240
147型二位空白面板
147 Blank plate
¥:185.00

F71 玻璃火山灰

Glass pozzolanic



窗帘开关 Curtain switch

控制回路：窗帘一开(零火线)
 产品分类：WIFI开关,WIFI+RF开关,ZIGBEE开关
 工作电压：100V~240V~,50Hz/60Hz
 工作电流：2A Max(纯阻性负载)
 负载类型：总负载低于350W
 产品材质：钢化玻璃面板+阻燃PC外壳
 尺寸(高*宽*厚)：86mm*86mm*34mm
 使用环境：温度0℃~40℃,相对湿度小于95%
 无线频率：2.4GHz 433.92MHz

Control loop: curtain opening (zero live line)
 Product classification: WiFi switch, WiFi + RF switch, ZigBee switch
 Working voltage: 100V ~ 240V ~ 50 Hz / 60 Hz
 Working current: 2A max (pure resistive load)
 Load type: total load less than 350W
 Product material: toughened glass panel + flame retardant PC shell
 Size (height * width * thickness): 86mm * 86mm * 34mm
 Use environment: temperature 0 °C ~ 40 °C, relative humidity less than 95%
 Wireless frequency: 2.4GHz 433.92mhz

- 天猫直连 Tmall direct link
- 蓝牙配对 Bluetooth pairing
- APP控制 App control
- 语音控制 Voice control
- 智能联动 Intelligent linkage

强大综合结构优化升级

Optimization and upgrading of powerful comprehensive structure



纯平面设计
Flat panel design



防水玻璃面板
Waterproof glass panel



电容触摸屏
Capacitive touch screen



柔光LED指示灯
Soft light LED indicator









 









 
 



 





 




 












 














定制图案文字
Custom pattern text



触控式操作
Touch operation

F71 Glass pozzolanica

F71 玻璃火山灰

 <p>F71-0001 一位触摸开关(零火线) 1 gang 1 way touch switch 蓝牙WiFi一位触摸开关(零火线) 1 gang 1 way touch switch 涂鸦Zigbee一位触摸开关(零火线) 1 gang 1 way touch switch</p> <p>¥:400.00 ¥:500.00 ¥:600.00</p>	 <p>F71-0011 一位开关+USB带13A方角插座 1 gang switch and 13A square pin socket</p> <p>¥:295.00</p>	 <p>F71-0021 小板16A拨动一位开关单控 16A 1 gang 1 way toggle switch 小板16A拨动一位开关双控 16A 1 gang 2 way toggle switch</p> <p>¥:175.00 ¥:180.00 ¥:295.00</p>	 <p>F71-0031 小板16A以色列插座 Israel socket</p> <p>¥:175.00</p>	 <p>F71-0041 小板10A二位插座 10A Double 2 pole socket</p> <p>¥:155.00</p>	 <p>F71-0051 小板带位泰式六孔插座 Dislocation Thai 6 pin socket</p> <p>¥:165.00</p>
 <p>F71-0002 一位触摸开关(零火线) 2 gang 1 way touch switch 蓝牙WiFi二位触摸开关(零火线) 2 gang 1 way touch switch 涂鸦Zigbee二位触摸开关(零火线) 2 gang 1 way touch switch</p> <p>¥:450.00 ¥:550.00 ¥:650.00</p>	 <p>F71-0012 小板16A一位开关单控 16A 1 gang 1 way switch 小板16A一位开关双控 16A 1 gang 2 way switch 小板16A一位开关多控 16A 1 gang more way switch</p> <p>¥:118.00 ¥:121.00 ¥:158.00</p>	 <p>F71-0022 小板16A拨动二位开关单控 2 gang 1 way toggle switch 小板16A拨动二位开关双控 2 gang 2 way toggle switch</p> <p>¥:190.00 ¥:200.00</p>	 <p>F71-0032 小板16A意大利+德式插座 Italy+German socket</p> <p>¥:175.00</p>	 <p>F71-0042 小板10A一位开关带二位插座 1 gang switch and 2 pole socket</p> <p>¥:155.00</p>	 <p>F71-0052 小板一位开关带13A方角插座 1 gang switch and 13A square pin socket</p> <p>¥:158.00</p>
 <p>F71-0003 三位触摸开关(零火线) 3 gang 1 way touch switch 蓝牙WiFi三位触摸开关(零火线) 3 gang 1 way touch switch 涂鸦Zigbee三位触摸开关(零火线) 3 gang 1 way touch switch</p> <p>¥:500.00 ¥:600.00 ¥:700.00</p>	 <p>F71-0013 小板16A二位开关单控 16A 2 gang 1 way switch 小板16A二位开关双控 16A 2 gang 2 way switch 小板16A二位开关多控 16A 2 gang more way switch</p> <p>¥:138.00 ¥:144.00 ¥:210.00</p>	 <p>F71-0023 小板16A拨动三位开关单控 3 gang 1 way toggle switch 小板16A拨动三位开关双控 3 gang 2 way toggle switch</p> <p>¥:205.00 ¥:220.00</p>	 <p>F71-0033 大板16A三极插座 16A 3 pole socket</p> <p>¥:130.00</p>	 <p>F71-0043 小板10A一位开关带二位插座 1 gang switch and 4 pole socket</p> <p>¥:165.00</p>	 <p>F71-0053 小板一位开关带15A圆孔插座 1 gang switch and 15A round pins socket</p> <p>¥:163.00</p>
 <p>F71-0004 四位触摸开关(零火线) 4 gang 1 way touch switch 蓝牙WiFi四位触摸开关(零火线) 4 gang 1 way touch switch 涂鸦Zigbee四位触摸开关(零火线) 4 gang 1 way touch switch</p> <p>¥:550.00 ¥:650.00 ¥:750.00</p>	 <p>F71-0014 小板16A三位开关单控 16A 3 gang 1 way switch 小板16A三位开关双控 16A 3 gang 2 way switch</p> <p>¥:158.00 ¥:167.00</p>	 <p>F71-0024 小板16A拨动四位开关单控 4 gang 1 way toggle switch 小板16A拨动四位开关双控 4 gang 2 way toggle switch</p> <p>¥:220.00 ¥:240.00</p>	 <p>F71-0034 大板10A三极插座 10A 3 pole socket</p> <p>¥:125.00</p>	 <p>F71-0044 小板16A多功能三极插座 16A 3 pin universal socket</p> <p>¥:138.00</p>	 <p>F71-0054 小板一位开关带16A多功能插座 1 gang switch and 3 pin MF socket</p> <p>¥:163.00</p>
 <p>F71-0005 调光开关(零火线) Dimming switch (zero live wire) WiFi调光开关 WiFi dimming switch Zigbee调光开关 Zigbee dimming switch</p> <p>¥:600.00 ¥:700.00 ¥:800.00</p>	 <p>F71-0015 小板16A四控开关单控 16A 4 gang 1 way switch 小板16A四控开关双控 16A 4 gang 2 way switch</p> <p>¥:178.00 ¥:190.00</p>	 <p>F71-0025 小板20A双极开关带指示灯 20A switch with indicator light 小板45A双极开关带指示灯 45A switch with indicator light</p> <p>¥:187.00 ¥:226.00</p>	 <p>F71-0035 大板10A三位二极插座 10A Two or three pole socket</p> <p>¥:130.00</p>	 <p>F71-0045 小板13A三极多功能插座 5 pin multi-function socket</p> <p>¥:156.00</p>	 <p>F71-0055 小板一位开关带13A方角插座 (带指示灯) 1 gang switch and 13A square pin socket</p> <p>¥:158.00</p>
 <p>F71-0006 调速开关(零火线) Speed control switch (zero live line) WiFi调速开关 WiFi speed control switch Zigbee调速开关 Zigbee speed control switch</p> <p>¥:600.00 ¥:700.00 ¥:800.00</p>	 <p>F71-0016 小板16A三位开关多控 Small panel 16A 3 gang 3 way switch</p> <p>¥:230.00</p>	 <p>F71-0026 小板45A双极开关带指示灯 45A switch with indicator light</p> <p>¥:226.00</p>	 <p>F71-0036 大板10A三极插座 10A 3 pole socket</p> <p>¥:135.00</p>	 <p>F71-0046 小板13A三极带位多功能插座 5 pin multi-function socket</p> <p>¥:166.00</p>	 <p>F71-0056 小板一位开关带15A圆孔插座 (带指示灯) 1 gang switch and 15A round pins socket</p> <p>¥:163.00</p>
 <p>F71-0007 窗帘开关(零火线) Curtain switch (zero live wire) WiFi窗帘开关 WiFi curtain switch Zigbee窗帘开关 Zigbee curtain switch</p> <p>¥:600.00 ¥:700.00 ¥:800.00</p>	 <p>F71-0017 小板16A遮阳帘升降开关 lower window filter switch</p> <p>¥:175.00</p>	 <p>F71-0027 小板16A遮阳帘复位开关 Shutter reset switch</p> <p>¥:195.00</p>	 <p>F71-0037 小板16A一位开关带16A三极插座 1 gang 1 way switch and 16A 3 pole socket ¥:160.00 小板16A一位开关带16A三极插座 1 gang 2 way switch and 16A 3 pole socket ¥:163.00</p>	 <p>F71-0047 小板13A方角插座 13A square corner socket</p> <p>¥:138.00</p>	 <p>F71-0057 小板一位开关带16A多功能插座 (带指示灯) 1 gang switch and 3 pin MF socket(with neon)</p> <p>¥:163.00</p>
 <p>F71-0008 大板一位开关带16A多功能插座 1 gang switch and 3 pin multi-purpose socket</p> <p>¥:163.00</p>	 <p>F71-0018 小板16A门控开关 gating switch</p> <p>¥:142.00</p>	 <p>F71-0028 小板16A德式插座 German socket</p> <p>¥:163.00</p>	 <p>F71-0038 大板一位开关带10A三极插座 1 gang 2 way switch and 5 pole socket ¥:160.00 大板一位开关带10A三极插座 1 gang 2 way switch and 5 pole socket ¥:163.00</p>	 <p>F71-0048 小板15A圆角插座 15A 3 round pins socket</p> <p>¥:155.00</p>	 <p>F71-0058 小板一位开关带13A多功能五孔插座 (带指示灯) 1 gang switch and 5 pin multi-function socket</p> <p>¥:178.00</p>
 <p>F71-0009 大板一位开关带13A方角插座 1 gang switch and 13A square pin socket</p> <p>¥:158.00</p>	 <p>F71-0019 小板16A法式门控开关 British gating switch</p> <p>¥:142.00</p>	 <p>F71-0029 小板16A法式插座 French socket</p> <p>¥:163.00</p>	 <p>F71-0039 小板10A二位开关单控带三极插座 2 gang 1 way switch and 3 pole socket ¥:180.00 小板10A二位开关双控带三极插座 2 gang 2 way switch and 3 pole socket ¥:186.00</p>	 <p>F71-0049 小板15A美式标准三极插座 15A Triad Bat American standard socket</p> <p>¥:158.00</p>	 <p>F71-0059 小板16A法式插座带二位USB 2 USB with German socket</p> <p>¥:230.00</p>
 <p>F71-0010 大板一位开关带16A多功能带二位USB 1 gang switch with 16A 3pin multi-function with 2USB</p> <p>¥:290.00</p>	 <p>F71-0020 小板16A门铃开关 doorbell switch</p> <p>¥:142.00</p>	 <p>F71-0030 小板16A俄式插座 Russian socket</p> <p>¥:163.00</p>	 <p>F71-0040 小板10A二极插座 10A 2 pole socket</p> <p>¥:140.00</p>	 <p>F71-0050 小板15A泰式多功能三极插座 15A Thai type multi-function 3 pole socket</p> <p>¥:158.00</p>	 <p>F71-0060 小板16A法式插座带二位USB 2 USB with French socket</p> <p>¥:230.00</p>

F71 Glass pozzolanica 玻璃火山灰



F71-0061
小板16A德式插座+USB/Type-c
Small board 16A German socket
+ USB / type-c
¥:230.00



F71-0062
小板16A法式插座+USB/Type-c
Small board 16A French socket
+ USB / type-c
¥:230.00



F71-0063
小板16A一位开关带德式插座
1 gang German socket
¥:175.00



F71-0064
小板16A一位开关带法式插座
1 gang French socket
¥:175.00



F71-0065
小板16A德式插座带防水
German socket and Waterproof belt
¥:175.00



F71-0066
小板16A法式插座带防水
French socket and Waterproof belt
¥:175.00



F71-0067
小板二位USB带13A方角插座 (横)
2 USB with 13A square corner
socket with switch
¥:230.00



F71-0068
小板15A美标插座带USB+TYPE-C
American Standard with USB+type-C
¥:230.00



F71-0069
小板15A美式插座带USB+TYPE-C
15A 1A MF socket with USB+type-C
¥:230.00



F71-0070
小板二位USB带13A方角插座
(带翻门)
2 USB with 13A square corner
socket with flip cover
¥:265.00



F71-0071
小板二位USB带13A多功能插座
(带翻门)
2 USB with 1 pin multi-purpose socket
with flip cover
¥:265.00



F71-0072
小板一位开关带二位USB带
13A多功能插座 (带指示灯)
1 gang switch with two USB and
13A multi-function socket
¥:240.00



F71-0073
小板一位开关带二位USB带
2 USB with 13A square corner
socket with flip cover
¥:240.00



F71-0074
小板13A多功能带Type-c+USB
13A multifunction with type-c
+ USB
¥:230.00



F71-0075
小板13A方带Type-c+USB
13A square angle band type-c
+ USB
¥:230.00



F71-0076
小板一位开关13A多功能插座带
Type-c+USB(带指示灯)
1 gang switch 13A multi-purpose
socket with Type-c+USB(with light)
¥:240.00



F71-0077
小板二位USB带13A多功能插座
带小开关 (竖)
2 USB with Three very multi-purpose
socket with switch
¥:240.00



F71-0078
小板一位开关13A方插带
Type-c+USB(带指示灯)
1 gang switch 13A square insert belt
type-c+USB(with light)
¥:240.00



F71-0079
小板二位USB带13A方角插座
带小开关 (竖)
2 USB with 13A square corner
socket with switch
¥:240.00



F71-0080
小板15A美式多功能插座带二
位USB
15A 1A MF multi-function socket
with 2-bit USB
¥:230.00



F71-0081
小板15A美式+2USB
15A 1A + 2USB
¥:230.00



F71-0082
小板二位USB带13A多功能插座 (横)
2 USB with 3 pin multi-purpose socket
¥:230.00



F71-0083
小板二位USB带10A二三级插座
2 USB and 5 pin socket
¥:220.00



F71-0084
小板二位USB带10A二三级
插座带开关
2 USB and 5 pin socket with switch
¥:230.00



F71-0085
10A二三级五孔带USB+TYPE-C 2.1A
10A 5 pole socket with USB+type-c 2.1A
¥:240.00
10A二三级五孔带USB+TYPE-C 4A
10A 5 pole socket with USB+type-c 4A
¥:360.00



F71-0086
小板一位开关带13A多功能五孔
插座带USB
1 gang switch and 5 pin multi-function
socket with USB and indicator light
¥:290.00



F71-0087
小板13A二位USB带多功能五孔插座
2 USB with 5 pin multi-function socket
¥:230.00



F71-0088
小板13A二位USB带多功能五孔
插座带开关
2 USB with 5 pin multi-function socket
with switch
¥:240.00



F71-0089
小板13A多功能五孔带USB+Type-c 2.1A
¥:240.00
小板13A多功能五孔带USB+Type-c 4A
13A MF 5 pin socket with USB+type-c 4A
¥:360.00



F71-0090
小板一位电视插座
TV socket
¥:155.00



F71-0091
小板一位电话插座 ¥:155.00
小板一位电脑插座 ¥:165.00
小板一位电脑插座(超六类) ¥:218.00
computer socket(6)



F71-0092
小板双电视插座
Two TV socket
¥:175.00



F71-0093
小板双电话插座 ¥:175.00
小板双电视插座 ¥:195.00
Two computer socket
小板双电视插座(超六类) ¥:245.00
Two computer socket(6)
小板电话电脑插座 ¥:185.00
telephone+ computer socket
小板电话电脑插座(超六类) ¥:235.00
telephone+ computer socket(6)



F71-0094
小板电视电话插座 ¥:175.00
TV + telephone socket
小板电视电脑插座 ¥:185.00
TV + computer socket
小板电视电脑插座(超六类) ¥:235.00
TV + computer socket(6)



F71-0095
小板电话带USB插座 ¥:320.00
TE1 + USB socket
小板电脑带USB插座 ¥:320.00
computer + USB socket
小板电脑带USB插座(超六类) ¥:370.00
computer + USB socket(6)



F71-0096
小板一位TV+FM
TV and FM
¥:230.00



F71-0097
小板一位卫星插座
Satellite socket
¥:165.00



F71-0098
小板二位卫星插座
Double satellite socket
¥:195.00



F71-0099
小板卫星+电视插座
Satellite and TV socket
¥:185.00



F71-0100
小板卫星带电视插座 ¥:185.00
Satellite and telephone socket
小板卫星带电脑插座 ¥:195.00
Satellite and computer socket
小板卫星带电脑插座(超六类) ¥:245.00
Satellite and computer socket(6)



F71-0101
小板二极插座带电视插座
2 pin socket with TV
¥:320.00



F71-0102
小板二极插座带电话插座 ¥:320.00
2 pin socket with telephone
小板二极插座带电脑插座 ¥:320.00
2 pin socket with computer
小板二极插座带电脑插座(超六类) ¥:370.00
2 pin socket with computer



F71-0103
小板一位光纤插座
Optical fiber socket
¥:195.00



F71-0104
小板二位USB插座
Double USB socket
¥:265.00



F71-0105
小板单联音响插座
Single audio socket
¥:225.00



F71-0106
小板双联音响插座
Double audio socket
¥:305.00



F71-0107
触摸延时开关 (节能)
Touch delay delay switch
(energy saving)
¥:225.00



F71-0108
声光控制延时开关 (节能)
Sound-light controlled delay switch
(energy saving)
¥:225.00



F71-0109
红外人体感应开关
Human body induction
¥:300.00



F71-0110
凹型地脚灯(亮光/暖光)
The footlights
¥:260.00



F71-0111
凹型红外线人体感应地脚灯(亮光/暖光)
The human body induction footlights
¥:330.00



F71-0112
平面地脚灯(亮光/暖光)
Footlights
¥:260.00



F71-0113
叮咛门铃
Ding dong doorbell
¥:291.00



F71-0114
机械式40A插卡取电 ¥:320.00
Mechanical card for electricity
感应式低频40A插卡取电 ¥:490.00
Low frequency induction card
for electricity
感应式高频40A插卡取电 ¥:590.00
High frequency induction card
for electricity



F71-0115
紧急呼叫开关
Emergency call switch
¥:280.00



F71-0116
请勿打扰请即清理门铃开关
(按钮式)
Do not disturb, please namely clearing
please + later doorbell "button"
¥:323.00



F71-0117
请勿打扰门铃开关
(按钮式)
Do not disturb + doorbell "button"
¥:475.00



F71-0118
请勿打扰请即清理门铃开关
(按钮式)
Do not disturb please
namely clearing please "button"
¥:475.00









F71-0119
智能音乐控制开关
Intelligence music control switch
¥:750.00



























F71-0120
温控调节开关
Temperature control switch
¥:780.00

F71 玻璃火山灰


	F71-0121 温度控制调节开关 Temperature control switch ¥:930.00		F71-0131 蓝牙+3.5音频+二位USB+HDMI Bluetooth audio+3.5+USB+HDMI ¥:5300.00		F71-0141 二分之一AV音频+USB+3.5音频 Half AV audio interface+USB+3.5 ¥:320.00		F71-0151 空白面板 Blank plate ¥:113.00		F71-0161 小板147型七位开关单控 147 7 gang 1 way switch ¥:336.00 小板147型七位开关双控 147 7 gang 2 way switch ¥:357.00		F71-0171 147二位开关带二位13A方角插座 147 two switch and double 13A square corner socket ¥:285.00
	F71-0122 调音开关 Tuning switch ¥:300.00		F71-0132 HDMI ¥:320.00		F71-0142 二分之一VGA+TV Half VGA+TV ¥:320.00		F71-0152 小板147型二位双极开关带二位13A方角插座 147 type two position bipolar switch with double 13A square socket ¥:295.00		F71-0162 小板147型八位开关单控 147 8 gang 1 way switch ¥:356.00 小板147型八位开关双控 147 8 gang 2 way switch ¥:380.00		F71-0172 147二位开关带二位13A多功能插座 147 two switch with double 13A MF socket ¥:285.00
	F71-0123 调光开关300W Dimming 300W ¥:220.00 调光开关600W Dimming 600W ¥:250.00 调光开关1000W Dimming 1000W ¥:280.00		F71-0133 USB+TYPE-C ¥:360.00		F71-0143 二分之一VGA+电脑插座 Half VGA+computer socket ¥:320.00		F71-0153 大板147型二位开关带二位13A多功能插座 147 two switch and double 13A multi-purpose socket ¥:295.00		F71-0163 147二位16A多功能三极插座 147 Double 16A MF socket ¥:276.00		F71-0173 147二位开关带二位五孔多功能插座 147 two switch and double 5 pin MF socket ¥:315.00
	F71-0124 调速开关300W Speed 300W ¥:220.00 调速开关600W Speed 600W ¥:250.00 调速开关1000W Speed 1000W ¥:280.00		F71-0134 HDMI+USB ¥:320.00		F71-0144 VGA+USB ¥:320.00		F71-0154 大板147型一开双极开关带13A方插+二位USB 147 two bipolar switch and double 13A square plug+2USB ¥:455.00		F71-0164 147二位13A多功能五孔插座 147 Double 5 pin multi-function socket ¥:312.00		F71-0174 147二位开关带二位13A方角插座(带指示灯) 147 two switch and double 13A square corner socket with indicator light ¥:295.00
	F71-0125 一位开关带调光开关500W 3 gang with dimmer switch ¥:235.00		F71-0135 HDMI+USB+3.5音频 HDMI+USB+3.5 ¥:320.00		F71-0145 VGA+HDMI ¥:320.00		F71-0155 大板147型一位开关带13A多功能+二位USB 147 Double 13A MF+2USB socket ¥:435.00		F71-0165 小板147型二位15A美标插座 147 Double 15A triode flat American standard socket ¥:310.00		F71-0175 147二位开关带二位13A多功能插座(带指示灯) 147 two switch and double 13A MF socket with light ¥:295.00
	F71-0126 一位开关带调速开关500W 1 gang with speed switch ¥:235.00		F71-0136 VGA+USB+3.5音频 VGA+USB+3.5 ¥:320.00		F71-0146 45A出线柱 45A Outlet ¥:275.00		F71-0156 小板147型二位开关单控 147 2 gang 1 way switch ¥:236.00 小板147型二位开关双控 147 2 gang 2 way switch ¥:242.00		F71-0166 小板147型二位15A美式三极插座 147 Double 15A triode flat American standard socket ¥:310.00		F71-0176 147二位开关带二位13A方插+二位USB(小板) 147 two switch and double 13A square corner socket+2USB ¥:385.00
	F71-0127 13A开关带保险丝(带指示灯) 13A switch with fuse(with neon) ¥:265.00		F71-0137 AV+3.5音频 AV+3.5 ¥:320.00		F71-0147 德式插座带开关(WiFi版) German socket with switch (WiFi version) ¥:670.00		F71-0157 小板147型三位开关单控 147 3 gang 1 way switch ¥:256.00 小板147型三位开关双控 147 3 gang 2 way switch ¥:265.00		F71-0167 147二位13A方角插座 147 Double 13A square corner ¥:276.00		F71-0177 147二位开关带二位13A多功能+二位USB(小板) 147 two switch and double 13A MF socket+2USB ¥:385.00
	F71-0128 20A出线柱 20A outgoing post ¥:245.00		F71-0138 VGA+AV音频接口 VGA+AV audio interface ¥:320.00		F71-0148 法式插座带开关(WiFi版) French socket with switch (WiFi version) ¥:670.00		F71-0158 小板147型四位开关单控 147 4 gang 1 way switch ¥:276.00 小板147型四位开关双控 147 4 gang 2 way switch ¥:288.00		F71-0168 147二位15A圆形插座 147 Double 15A 3 round pins socket ¥:310.00		F71-0178 147二位开关带二位13A方插+USB/Type-c 147 two switch double 13A square band lamp+USB/type-c ¥:385.00
	F71-0129 剃须插座 Shaving socket ¥:500.00		F71-0139 HDMI+AV音频接口 HDMI+AV audio interface ¥:320.00		F71-0149 13A多功能插座带开关(WiFi版) 13A multi-functional socket with switch (WiFi version) ¥:700.00		F71-0159 小板147型五位开关单控 147 5 gang 1 way switch ¥:296.00 小板147型五位开关双控 147 5 gang 2 way switch ¥:311.00		F71-0169 小板147型二位13A插位多功能五孔插座 147 type Double 13A dislocation multi-function 5 hole socket ¥:332.00		F71-0179 147二位开关带二位13A多功能插座带灯+USB/Type-c 147 two switch double 13A MF band lamp+USB/type-c ¥:385.00
	F71-0130 USB+电脑插座+无线路由 USB+computer socket wireless router ¥:900.00		F71-0140 二分之一AV音频+卫星 Half AV audio interface+Satellite socket ¥:320.00		F71-0150 13A方角插座带开关(WiFi版) 13A square corner socket with switch (WiFi version) ¥:700.00		F71-0160 小板147型六位开关单控 147 6 gang 1 way switch ¥:311.00 小板147型六位开关双控 147 6 gang 2 way switch ¥:334.00		F71-0170 147二位10A二三极插座 147 Double position two and three pole socket ¥:250.00		F71-0180 147二位开关带二位15A圆角插座 147 two switch and double 15A 3 round pins socket with indicator light ¥:326.00

F71 玻璃火灰

 <p>F71-0181 小版147型二位开关二位13A方角插座(带指示灯) 147 two switch with double 13A square angle socket (with indicator light) ¥:326.00</p>	 <p>F71-0191 147型二位带USB+type-c(模块) 147 double German + USB / type-C (module) ¥:510.00</p>	 <p>F71-0201 147 一位开关带二位13A多功能五孔插座+2USB(带指示灯) 147 two position switch with two position 13A multifunction five hole socket + 2 USB (with indicator) ¥:580.00</p>	 <p>F71-0211 147 一开单控带13A方角插座+双USB 147 1 gang 1 way socket with 13A square angle socket + 2USB ¥:348.00</p>	 <p>F71-0221 147 二开单控带16A多功能插座 147 two switch single control 16A MF 3 pin socket ¥:276.00</p>	 <p>F71-0231 147型二位16A德式插座带16A MF 3 pin 插座 147 double computer with 16A MF pin socket ¥:333.00</p>
 <p>F71-0182 147型二位剃须插座 147 two shaving socket ¥:680.00</p>	 <p>F71-0192 147型二位法式带USB+type-c(模块) 147 double French + USB / type-C (module) ¥:510.00</p>	 <p>F71-0202 147 二位13A多功能五孔插座+四位USB 147 13A double 5 pin multi-function socket+4USB ¥:460.00</p>	 <p>F71-0212 147 一开单控带15A泰式插座 147 one open single control with 15A Thai socket ¥:283.00</p>	 <p>F71-0222 147型二开单控带13A方角插座 147 type double open single control socket with 13A square angle ¥:276.00</p>	 <p>F71-0232 147型二位16A德式插座带防水 147 two position 16A German socket with waterproof ¥:350.00</p>
 <p>F71-0183 147 45A开关+一位开关16A多功能插座(带指示灯) (带小版前开关) 147 kitchen switch ¥:415.00</p>	 <p>F71-0193 二位17A德式+二位USB(小版连接) 147 Double German with 2USB ¥:410.00</p>	 <p>F71-0203 147 二位开关+二位13A多功能五孔插座+四位USB 147 two switch double 5 pin multi function socket+4USB ¥:480.00</p>	 <p>F71-0213 147型一开单控带多功能五孔插座+四位USB 147 one open single control and MF 5 pin + 2USB socket ¥:348.00</p>	 <p>F71-0223 147型10A二极带10A二极插座 147 type 10A two pole with 10A two pole socket ¥:280.00</p>	 <p>F71-0233 147型二位16A法式插座带防水 147 two position 16A French socket with waterproof ¥:350.00</p>
 <p>F71-0184 14745A开关+一位开关13A方角插座(带指示灯) (带小版前开关) 147 kitchen switch ¥:415.00</p>	 <p>F71-0194 147 二位16A法式+2USB(小版连接) 147 Double French with 2USB ¥:410.00</p>	 <p>F71-0204 147型一开开关带二位多功能五孔插座带USB+type-c 147 low switch and double 13A 3 hole socket with indicator light ¥:550.00</p>	 <p>F71-0214 147型二位10A二极带四位USB插座 147 double 10A 5 pin socket + 4USB with indicator light ¥:440.00</p>	 <p>F71-0224 147型二位一开单控带二位16A三极插座 147 type 2 gang 1 way switch double 16A three pole socket ¥:320.00</p>	 <p>F71-0234 147 一位开关二位16A德式插座带指示灯+USB/type-c(小版) 147 double switch double German socket+USB/type-c with light ¥:550.00</p>
 <p>F71-0185 147 45A开关+一位开关13A方角插座(带指示灯) 147 Kitchen switch ¥:415.00</p>	 <p>F71-0195 147 四位USB插座 147 4 USB socket ¥:530.00</p>	 <p>F71-0205 147型一位开关带二位13A多功能带四位USB(带指示灯) 147 two switch and double 13A MF +4USB socket (with indicator light) ¥:480.00</p>	 <p>F71-0215 147型一位13A多功能带四位USB带小开关 147 double 13A 3pin multi-function socket + 4USB with small switch ¥:480.00</p>	 <p>F71-0225 147型二位一开单控带二位10A二极插座 147 type 2 gang 1 way switch double 10A 5 pole socket ¥:320.00</p>	 <p>F71-0235 147 一位开关二位16A法式插座带指示灯+USB/type-c(小版) 147 double switch double french socket+USB/type-c with light ¥:550.00</p>
 <p>F71-0186 147 45A双极开关带指示灯 147 type 45A bipolar switch ¥:360.00</p>	 <p>F71-0196 147 二位多功能插座+4USB 147 2-bit multi-function socket + 4USB ¥:460.00</p>	 <p>F71-0206 147型一开带二位13A方角插座四位USB 147 double 13A square plug with 4USB with small switch ¥:480.00</p>	 <p>F71-0216 147型二位13A方角插座四位USB带小开关 147 double 13A square plug with 4USB with small switch ¥:480.00</p>	 <p>F71-0226 147型二位10A二极插座 ¥:460.00 带USB+type-c 2.1A 147 type double 10A 5 pole socket USB + type-c 2.1A 147型二位10A二极插座 ¥:720.00 带USB+type-c 4A 147 type double 10A 5 pole socket USB + type-c 4A</p>	 <p>F71-0236 147 二位开关二位16A德式插座(带指示灯) 147 two switch double 16A German socket with light ¥:365.00</p>
 <p>F71-0187 147 16A二位德式插座 147 Double German socket ¥:326.00</p>	 <p>F71-0197 147 二位13A方角插座+4USB 147 two bit 13A square socket +4USB ¥:460.00</p>	 <p>F71-0207 147二位13A方角插座四位USB 147 type double position 13A square inserting band 4 USB ¥:460.00</p>	 <p>F71-0217 147 二位一开16A多功能带指示灯 147 two switch and double 16A MF 3 pin socket with neon ¥:326.00</p>	 <p>F71-0227 147型二位多功能五孔插座 ¥:460.00 带USB+type-c 2.1A 147 type double 5 pin MF socket USB + type-c 2.1A 147型二位多功能五孔插座 ¥:720.00 带USB+type-c 4A 147 type double 5 pin MF socket USB + type-c 4A</p>	 <p>F71-0237 147 二位开关二位16A法式插座(带指示灯) 147 two switch double 16A French socket with light ¥:365.00</p>
 <p>F71-0188 147 16A二位法式插座 147 Double French socket ¥:326.00</p>	 <p>F71-0198 147 一位13A方角插座+二位USB 13A square corner socket and two USB ¥:418.00</p>	 <p>F71-0208 147 二位13A多功能+4USB(带盖板) 147 double 13A multi-function + 4USB (with cover plate) ¥:530.00</p>	 <p>F71-0218 147 二位多功能四位USB 147 type multi-functional 3 pin socket band 4 USB ¥:460.00</p>	 <p>F71-0228 147型13A多功能双USB带五位孔插座 147 type 13A multi-functional 2USB with 5 pin multi-functional socket ¥:480.00</p>	 <p>F71-0238 147 二位开关二位16A德式插座带指示灯+二位USB(小版) 147 two switch double 16A German socket + 2usb with light ¥:450.00</p>
 <p>F71-0189 147 16A二位德式插座 147 Double German socket ¥:326.00</p>	 <p>F71-0199 147 一位16A多功能插座+二位USB插座 16A MF 3 pin socket and 2USB socket ¥:418.00</p>	 <p>F71-0209 147型一位13A方角带四位USB(带指示灯) 147 double 13A square inserting +4USB socket ¥:530.00</p>	 <p>F71-0219 147 16A多功能+方型五孔插座 147 16A MF 3 pin +MF 5 pin socket ¥:295.00</p>	 <p>F71-0229 147 二位电脑插座带二位USB插座 147 type double computer with 2USB socket ¥:460.00</p>	 <p>F71-0239 147 二位开关二位16A法式插座带指示灯+二位USB(小版) 147 two switch double 16A French socket + 2USB with light ¥:450.00</p>
 <p>F71-0190 147 16A二位法式插座 147 Double French socket ¥:326.00</p>	 <p>F71-0200 147型二位开关带二位多功能五孔插座带双USB 147 two multi purpose socket+2USB ¥:415.00</p>	 <p>F71-0210 147一开单控带13A多功能五孔插座 147 1 gang 1 way switch with 13A 5 pin MF socket ¥:274.00</p>	 <p>F71-0220 147 10A二极插座 10A 8 pole socket ¥:310.00</p>	 <p>F71-0230 147型二位电话带二位电脑插座 147 double telephone with double computer socket ¥:390.00</p>	 <p>F71-0240 147型一位空白面板 147 Blank plate ¥:385.00</p>

F71 玻璃香槟金

 Class champagne gold

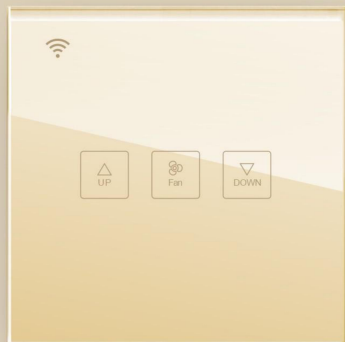













调速开关 Speed control switch

控制回路：调速一开(零火线)
产品分类：WiFi开关、WiFi+RF开关、ZIGBEE开关
工作电压：100V~240V~50Hz/60Hz
工作电流：2A Max(纯阻性负载)
负载类型：总负载低于400W
产品材质：钢化玻璃面板+阻燃PC外壳
尺寸(高*宽*厚)：86mm*86mm*34mm
使用环境：温度0℃~40℃,相对湿度小于95%
无线频率：2.4GHz 433.92MHz

Control loop: Speed regulation one open (zero live line)
Product classification: WiFi switch, WiFi + RF switch, ZigBee switch
Working voltage: 100V ~ 240V ~, 50 Hz / 60 Hz
Working current: 2A max (pure resistive load)
Load type: total load less than 400W
Product material: toughened glass panel + flame retardant PC shell
Size (height * width * thickness): 86mm * 86mm * 34mm
Use environment: temperature 0 °C ~ 40 °C, relative humidity less than 95%
Wireless frequency: 2.4GHz 433.92MHz



F71 玻璃香槟金

 <p>F71-0001 一位触摸开关(零火线) 1 gang 1 way touch switch 蓝牙WiFi一位触摸开关(零火线) 1 gang 1 way touch switch 涂鸦Zigbee一位触摸开关(零火线) 1 gang 1 way touch switch</p> <p>¥:400.00 ¥:500.00 ¥:600.00</p>	 <p>F71-0011 一位开关+USB带13A方角插座 1 gang switch and 13A square pin socket</p> <p>¥:295.00</p>	 <p>F71-0021 小板16A拨动一位开关单控 16A 1 gang 1 way toggle switch</p> <p>¥:175.00</p> <p>小板16A拨动一位开关双控 16A 1 gang 2 way toggle switch</p> <p>¥:180.00</p>	 <p>F71-0031 小板16A以色列插座 Israel socket</p> <p>¥:175.00</p>	 <p>F71-0041 小板10A二极插座 10A Double 2 pole socket</p> <p>¥:155.00</p>	 <p>F71-0051 小板插座泰式六孔插座 Dislocation Thai 6 pin socket</p> <p>¥:165.00</p>
 <p>F71-0002 一位触摸开关(零火线) 2 gang 1 way touch switch 蓝牙WiFi二位触摸开关(零火线) 2 gang 1 way touch switch 涂鸦Zigbee二位触摸开关(零火线) 2 gang 1 way touch switch</p> <p>¥:450.00 ¥:550.00 ¥:650.00</p>	 <p>F71-0012 小板16A一位开关单控 16A 1 gang 1 way switch</p> <p>¥:118.00</p> <p>小板16A一位开关双控 16A 1 gang 2 way switch</p> <p>¥:121.00</p> <p>小板16A一位开关多控 16A 1 gang more way switch</p> <p>¥:158.00</p>	 <p>F71-0022 小板16A拨动二位开关单控 2 gang 1 way toggle switch</p> <p>¥:190.00</p> <p>小板16A拨动二位开关双控 2 gang 2 way toggle switch</p> <p>¥:200.00</p>	 <p>F71-0032 小板16A意大利+德式插座 Italy+German socket</p> <p>¥:175.00</p>	 <p>F71-0042 小板10A一位开关带二极插座 1 gang switch and 2 pole socket</p> <p>¥:155.00</p>	 <p>F71-0052 小板一位开关带13A方角插座 1 gang switch and 13A square pin socket</p> <p>¥:158.00</p>
 <p>F71-0003 三位触摸开关(零火线) 3 gang 1 way touch switch 蓝牙WiFi三位触摸开关(零火线) 3 gang 1 way touch switch 涂鸦Zigbee三位触摸开关(零火线) 3 gang 1 way touch switch</p> <p>¥:500.00 ¥:600.00 ¥:700.00</p>	 <p>F71-0013 小板16A二位开关单控 16A 2 gang 1 way switch</p> <p>¥:138.00</p> <p>小板16A二位开关双控 16A 2 gang 2 way switch</p> <p>¥:144.00</p> <p>小板16A二位开关多控 16A 2 gang more way switch</p> <p>¥:210.00</p>	 <p>F71-0023 小板16A拨动三位开关单控 3 gang 1 way toggle switch</p> <p>¥:205.00</p> <p>小板16A拨动三位开关双控 3 gang 2 way toggle switch</p> <p>¥:220.00</p>	 <p>F71-0033 大板16A三极插座 16A 3 pole socket</p> <p>¥:130.00</p>	 <p>F71-0043 小板10A一位开关带二极插座 1 gang switch and 4 pole socket</p> <p>¥:165.00</p>	 <p>F71-0053 小板一位开关带15A圆孔插座 1 gang switch and 15A round pins socket</p> <p>¥:163.00</p>
 <p>F71-0004 四位触摸开关(零火线) 4 gang 1 way touch switch 蓝牙WiFi四位触摸开关(零火线) 4 gang 1 way touch switch 涂鸦Zigbee四位触摸开关(零火线) 4 gang 1 way touch switch</p> <p>¥:550.00 ¥:650.00 ¥:750.00</p>	 <p>F71-0014 小板16A三位开关单控 16A 3 gang 1 way switch</p> <p>¥:158.00</p> <p>小板16A三位开关双控 16A 3 gang 2 way switch</p> <p>¥:167.00</p>	 <p>F71-0024 小板16A拨动四位开关单控 4 gang 1 way toggle switch</p> <p>¥:220.00</p> <p>小板16A拨动四位开关双控 4 gang 2 way toggle switch</p> <p>¥:240.00</p>	 <p>F71-0034 大板10A三极插座 10A 3 pole socket</p> <p>¥:125.00</p>	 <p>F71-0044 小板16A多功能三极插座 16A 3 pin universal socket</p> <p>¥:138.00</p>	 <p>F71-0054 小板一位开关带16A多功能插座 1 gang switch and 3 pin MF socket</p> <p>¥:163.00</p>
 <p>F71-0005 调光开关(零火线) Dimmer switch (zero live wire) WiFi调光开关 WiFi dimming switch Zigbee调光开关 Zigbee dimming switch</p> <p>¥:600.00 ¥:700.00 ¥:800.00</p>	 <p>F71-0015 小板16A四位开关单控 16A 4 gang 1 way switch</p> <p>¥:178.00</p> <p>小板16A四位开关双控 16A 4 gang 2 way switch</p> <p>¥:190.00</p>	 <p>F71-0025 小板20A双极开关带指示灯 20A switch with indicator light</p> <p>¥:187.00</p> <p>小板45A双极开关带指示灯 45A switch with indicator light</p> <p>¥:226.00</p>	 <p>F71-0035 大板10A两位三极插座 10A Two or three pole socket</p> <p>¥:130.00</p>	 <p>F71-0045 小板13A三极多功能插座 5 pin multi-function socket</p> <p>¥:156.00</p>	 <p>F71-0055 小板一位开关带13A方角插座 (带指示灯) 1 gang switch and 13A square pin socket</p> <p>¥:158.00</p>
 <p>F71-0006 调速开关(零火线) Speed control switch (zero live line) WiFi调速开关 WiFi speed control switch Zigbee调速开关 Zigbee speed control switch</p> <p>¥:600.00 ¥:700.00 ¥:800.00</p>	 <p>F71-0016 小板16A三位开关多控 Small panel 16A 3 gang 3 way switch</p> <p>¥:230.00</p>	 <p>F71-0026 小板45A双极开关带指示灯 45A switch with indicator light</p> <p>¥:226.00</p>	 <p>F71-0036 大板10A二极插座 10A 2 pole socket</p> <p>¥:135.00</p>	 <p>F71-0046 小板13A三极插座多功能插座 5 pin multi-function socket</p> <p>¥:166.00</p>	 <p>F71-0056 小板一位开关带15A圆孔插座 (带指示灯) 1 gang switch and 15A round pins socket</p> <p>¥:163.00</p>
 <p>F71-0007 窗帘开关(零火线) Curtain switch (zero live wire) WiFi窗帘开关 WiFi curtain switch Zigbee窗帘开关 Zigbee curtain switch</p> <p>¥:600.00 ¥:700.00 ¥:800.00</p>	 <p>F71-0017 小板16A遮阳卷帘开关 roller window filter switch</p> <p>¥:175.00</p>	 <p>F71-0027 小板16A遮阳卷帘开关 Shutter reset switch</p> <p>¥:195.00</p>	 <p>F71-0037 小板16A一位开关控制16A三极插座 1 gang 1 way switch and 16A 3 pole socket</p> <p>¥:160.00</p> <p>小板16A二位开关控制16A三极插座 1 gang 2 way switch and 16A 3 pole socket</p> <p>¥:163.00</p>	 <p>F71-0047 小板13A方角插座 13A square corner socket</p> <p>¥:138.00</p>	 <p>F71-0057 小板一位开关带16A多功能插座 (带指示灯) 1 gang switch and 3 pin MF socket(with neon)</p> <p>¥:163.00</p>
 <p>F71-0008 大板一位开关带16A多功能插座 1 gang switch and 3 pin multi-purpose socket</p> <p>¥:163.00</p>	 <p>F71-0018 小板16A门控开关 gating switch</p> <p>¥:142.00</p>	 <p>F71-0028 小板16A德式插座 German socket</p> <p>¥:163.00</p>	 <p>F71-0038 大板一位开关控制10A三极插座 1 gang 1 way switch and 5 pole socket</p> <p>¥:160.00</p> <p>大板一位开关控制10A二极插座 1 gang 2 way switch and 5 pole socket</p> <p>¥:163.00</p>	 <p>F71-0048 小板15A圆角插座 15A 3 round pins socket</p> <p>¥:155.00</p>	 <p>F71-0058 小板一位开关带13A多功能五孔插座 (带指示灯) 1 gang switch and 5 pin multi-function socket</p> <p>¥:178.00</p>
 <p>F71-0009 大板一位开关带13A方角插座 1 gang switch and 13A square pin socket</p> <p>¥:158.00</p>	 <p>F71-0019 小板16A法式门控开关 British gating switch</p> <p>¥:142.00</p>	 <p>F71-0029 小板16A法式插座 French socket</p> <p>¥:163.00</p>	 <p>F71-0039 小板10A二位开关单控带三极插座 2 gang 1 way switch and 3 pole socket</p> <p>¥:180.00</p> <p>小板10A二位开关双控带三极插座 2 gang 2 way switch and 3 pole socket</p> <p>¥:186.00</p>	 <p>F71-0049 小板15A美式标准三极插座 15A Triad Bat American standard socket</p> <p>¥:158.00</p>	 <p>F71-0059 小板16A法式插座带二位USB 16A French socket with 2 USB</p> <p>¥:230.00</p>
 <p>F71-0010 大板一位开关带16A多功能带二位USB 1 gang switch with 16A 3pin multi-function with 2USB</p> <p>¥:290.00</p>	 <p>F71-0020 小板16A门铃开关 doorbell switch</p> <p>¥:142.00</p>	 <p>F71-0030 小板16A俄式插座 Russian socket</p> <p>¥:163.00</p>	 <p>F71-0040 小板10A二极插座 10A 2 pole socket</p> <p>¥:140.00</p>	 <p>F71-0050 小板15A泰式多功能三极插座 15A Thai type multi-function 3 pole socket</p> <p>¥:158.00</p>	 <p>F71-0060 小板16A法式插座带二位USB 2 USB with French socket</p> <p>¥:230.00</p>

F71 Class champagne gold 玻璃香槟金



F71-0061
小板16A美式插座+USB/Type-c
Small board 16A German socket
+ USB / type-c
¥:230.00



F71-0062
小板16A法式插座+USB/Type-c
Small board 16A French socket
+ USB / type-c
¥:230.00



F71-0063
小板16A一位开关带插座
1 gang German socket
¥:175.00



F71-0064
小板16A一位开关法式插座
1 gang French socket
¥:175.00



F71-0065
小板16A美式插座带防水
German socket and Waterproof belt
¥:175.00



F71-0066
小板16A法式插座带防水
French socket and Waterproof belt
¥:175.00



F71-0067
小板二位USB带13A方角插座(横)
2 USB with 13A square corner
socket with switch
¥:230.00



F71-0068
小板15A美式插座带USB+TYPE-C
American Standard with USB+type-C
¥:230.00



F71-0069
小板15A泰式插座带USB+TYPE-C
15A Thai MF socket with USB+type-C
¥:230.00



F71-0070
小板一位USB带13A方角插座
(带保护门)
2 USB with 13A square corner
socket with flip cover
¥:265.00



F71-0071
小板二位USB带13A多功能插座
(带保护门)
2 USB with 3 pin multi-purpose socket
with flip cover
¥:265.00



F71-0072
小板一位开关带二位USB带
13A多功能插座(带指示灯)
1 gang switch with two USB and
13A multi-function socket
¥:240.00



F71-0073
小板一位开关带二位USB带
13A方角插座(带指示灯)
2 USB with 13A square corner
socket with flip cover
¥:240.00



F71-0074
小板13A多功能带Type-c+USB
13A multifunction with type-c
+ USB
¥:230.00



F71-0075
小板13A方角带Type-c+USB
13A square angle band type-c
+ USB
¥:230.00



F71-0076
小板一位开关带13A多功能插座带
Type-c+USB(带指示灯)
1 gang switch 13A multi-purpose
socket with Type-c+USB(with light)
¥:240.00



F71-0077
小板二位USB带13A多功能插座
带小开关(竖)
2 USB with Three very multi-purpose
socket with switch
¥:240.00



F71-0078
小板一位开关13A方角带
Type-c+USB(带指示灯)
1 gang switch 13A square insert belt
type-c+USB(with light)
¥:240.00



F71-0079
小板二位USB带13A方角插座
带小开关(竖)
2 USB with 13A square corner
socket with switch
¥:240.00



F71-0080
小板15A泰式多功能插座带二
位USB
15A Thai multi-function socket
with 2-bit USB
¥:230.00



F71-0081
小板15A泰式+2USB
15A Thai + 2USB
¥:230.00



F71-0082
小板二位USB带13A多功能插座(横)
2 USB with 3 pin multi-purpose socket
¥:230.00



F71-0083
小板二位USB带10A二极插座
2 USB and 5 pin socket
¥:220.00



F71-0084
小板二位USB带10A二极
插座带开关
2 USB and 5 pin socket with switch
¥:230.00



F71-0085
10A二极五孔带USB+TYPE-C 2 1A
10A 5 pole socket with USB+type-c 2 1A
¥:240.00
10A二极五孔带USB+TYPE-C 4A
10A 5 pole socket with USB+type-c 4A
¥:360.00



F71-0086
小板一位开关带13A多功能五孔
插座带USB
1 gang switch and 5 pin multi-function
socket with USB and indicator light
¥:290.00



F71-0087
小板13A二位USB带多功能五孔插座
2 USB with 5 pin multi-function socket
¥:230.00



F71-0088
小板13A二位USB带多功能五孔
插座带开关
2 USB with 5 pin multi-function socket
with switch
¥:240.00



F71-0089
小板13A多功能五孔带USB+Type-c 2 1A
13A MF 5 pin socket with USB+type-c 2 1A
¥:240.00
小板13A多功能五孔带USB+Type-c 4A
13A MF 5 pin socket with USB+type-c 4A
¥:360.00



F71-0090
小板一位电视插座
TV socket
¥:155.00



F71-0091
小板一位电话插座 ¥:155.00
小板一位电脑插座 ¥:165.00
小板一位电脑插座(超六类)
computer socket(6) ¥:218.00



F71-0092
小板双电视插座
Two TV socket
¥:175.00



F71-0093
小板双电话插座 ¥:175.00
小板双电视插座 ¥:195.00
小板双电脑插座
Two computer socket
¥:245.00
小板双电视插座(超六类)
Two computer socket(6)
¥:185.00
小板电话电脑插座
telephone+computer socket
小板电话电脑插座(超六类)
telephone+computer socket(6)
¥:235.00



F71-0094
小板电视电话插座
TV + telephone socket
¥:175.00
小板电视电脑插座
TV + computer socket
¥:185.00
小板电视电脑插座(超六类)
TV + computer socket(6)
¥:235.00



F71-0095
小板电话带USB插座
TELE + USB socket
¥:320.00
小板电话带USB插座
computer + USB socket
¥:320.00
小板电话带USB插座(超六类)
computer + USB socket(6)
¥:370.00



F71-0096
小板一位TV+FM
TV and FM
¥:230.00



F71-0097
小板一位卫星插座
Satellite socket
¥:165.00



F71-0098
小板二位卫星插座
Double satellite socket
¥:195.00



F71-0099
小板卫星+电视插座
Satellite and TV socket
¥:185.00



F71-0100
小板卫星带电话插座 ¥:185.00
小板卫星带电话插座
Satellite and telephone socket
¥:195.00
小板卫星带电视插座
Satellite and computer socket
¥:245.00
小板卫星带电视插座(超六类)
Satellite and computer socket(6)



F71-0101
小板二极插座带电视插座
2 pin socket with TV
¥:320.00



F71-0102
小板二极插座带电话插座 ¥:320.00
小板二极插座带电脑插座 ¥:320.00
小板二极插座带电脑插座(超六类)
2 pin socket with computer
¥:370.00



F71-0103
小板一位光纤插座
Optical fiber socket
¥:195.00



F71-0104
小板二位USB插座
Double USB socket
¥:265.00



F71-0105
小板单音频插座
Single audio socket
¥:225.00



F71-0106
小板双联音频插座
Double audio socket
¥:305.00



F71-0107
触摸延时开关(节能)
Touch delay delay switch
(energy saving)
¥:225.00



F71-0108
声光控制延时开关(节能)
Sound-light controlled delay switch
(energy saving)
¥:225.00



F71-0109
红外线人体感应开关
Human body induction
¥:300.00



F71-0110
凹型地脚灯(亮光/暖光)
The footlights
¥:260.00



F71-0111
凹型红外线人体感应地脚灯(亮光/暖光)
The human body induction footlights
¥:330.00



F71-0112
平面地脚灯(亮光/暖光)
Footlights
¥:260.00



F71-0113
叮咚门铃
Ding dong doorbell
¥:291.00



F71-0114
机械式40A插卡取电 ¥:320.00
机械式感应40A插卡取电 ¥:490.00
低频感应40A插卡取电
Low frequency induction card
for electricity
高频感应40A插卡取电
High frequency induction card
for electricity ¥:590.00



F71-0115
紧急呼叫开关
Emergency call switch
¥:280.00



F71-0116
请勿打扰请即清理门铃开关
(按钮式)
Do not disturb, please namely cleaning
please + later doorbell "button"
¥:323.00



F71-0117
请勿打扰门铃开关
(按钮式)
Do not disturb + doorbell "button"
¥:475.00



F71-0118
请勿打扰请即清理门铃开关
(按钮式)
Do not disturb please
namely cleaning please "button"
¥:475.00



F71-0119
智能音乐控制开关
Intelligent music control switch
¥:750.00



F71-0120
温控调节开关
Temperature control switch
¥:780.00

F71 Class champagne gold 玻璃香槟金



F71-0121
温度控制调节开关
Temperature control switch
¥:930.00



F71-0122
调音开关
Tuning switch
¥:300.00



F71-0123
调光开关300W
Dimming 300W ¥:220.00
调光开关600W
Dimming 600W ¥:250.00
调光开关1000W
Dimming 1000W ¥:280.00



F71-0124
调速开关300W
Speed 300W ¥:220.00
调速开关600W
Speed 600W ¥:250.00
调速开关1000W
Speed 1000W ¥:280.00



F71-0125
一位开关调光开关500W
1 gang with dimmer switch
¥:235.00



F71-0126
一位开关调速开关500W
1 gang with speed switch
¥:235.00



F71-0127
13A开关带保险丝 (带指示灯)
13A switch with fuse(with neon)
¥:265.00



F71-0128
20A出线柱
20A outgoing post
¥:245.00



F71-0129
剃须插座
Shaving socket
¥:500.00



F71-0130
USB+电脑插座+无线蓝牙
USB+computer socket wireless router
¥:900.00



F71-0131
蓝牙+3.5音频+二位USB+HDMI
Bluetooth audio+3.5+USB+HDMI
¥:5300.00



F71-0132
HDMI
¥:320.00



F71-0133
USB+TYPE-C
¥:360.00



F71-0134
HDMI+USB
¥:320.00



F71-0135
HDMI+USB+3.5音频
HDMI+USB+3.5
¥:320.00



F71-0136
VGA+USB+3.5音频
VGA+USB+3.5
¥:320.00



F71-0137
AV+3.5音频
AV+3.5
¥:320.00



F71-0138
VGA+AV音频接口
VGA+AV audio interface
¥:320.00



F71-0139
HDMI+AV音频接口
HDMI+AV audio interface
¥:320.00



F71-0140
二分之一AV音频+卫星
Half AV audio interface+
Satellite socket
¥:320.00



F71-0141
二分之一AV音频+USB+3.5音频
Half AV audio interface+USB+3.5
¥:320.00



F71-0142
二分之一VGA+TV
Half VGA+TV
¥:320.00



F71-0143
二分之一VGA+电脑插座
Half VGA+computer socket
¥:320.00



F71-0144
VGA+USB
¥:320.00



F71-0145
VGA+HDMI
¥:320.00



F71-0146
45A出线柱
45A Outlet
¥:275.00



F71-0147
德式插座带开关 (WiFi版)
German socket with switch
(WiFi version)
¥:670.00



F71-0148
法式插座带开关 (WiFi版)
French socket with switch
(WiFi version)
¥:670.00



F71-0149
13A多功能插座带开关 (WiFi版)
13A multi-functional socket with switch
(WiFi version)
¥:700.00



F71-0150
13A方角插座带开关 (WiFi版)
13A square corner socket with switch
(WiFi version)
¥:700.00



F71-0151
空白面板
Blank plate
¥:113.00



F71-0152
大板147型二位双极开关带二位
13A方角插座
147 type two position bipolar switch
with double 13A square socket
¥:295.00



F71-0153
大板147型二位开关带二位13A多
功能插座
147 Two switch and double 13A
multi-purpose socket
¥:295.00



F71-0154
大板147型二位开关带13A方
角插+二口USB
147 two bipolar switch and double
13A square plug+2USB
¥:435.00



F71-0155
大板147型二位开关带13A多功
能+二位USB
147 two switch and double 13A
MF+2USB socket
¥:435.00



F71-0156
大板147型二位开关单控
147 2 gang 1 way switch
¥:242.00



F71-0157
大板147型三位开关单控
147 3 gang 1 way switch
¥:256.00
小板147型三位开关双控
147 3 gang 2 way switch
¥:265.00



F71-0158
小板147型四位开关单控
147 4 gang 1 way switch
¥:276.00
小板147型四位开关双控
147 4 gang 2 way switch
¥:288.00



 
F71-0159
小板147型五位开关单控
147 5 gang 1 way switch
¥:296.00
小板147型五位开关双控
147 5 gang 2 way switch
¥:311.00



F71-0160
小板147型六位开关单控
147 6 gang 1 way switch
¥:311.00
小板147型六位开关双控
147 6 gang 2 way switch
¥:334.00




F71-0161
小板147型七位开关单控
147 7 gang 1 way switch
¥:336.00
小板147型七位开关双控
147 7 gang 2 way switch
¥:357.00



F71-0162
小板147型八位开关单控
147 8 gang 1 way switch
¥:356.00
小板147型八位开关双控
147 8 gang 2 way switch
¥:380.00



 F71-0163
147 二位16A多功能三极插座
147 Double 15A MF socket
¥:276.00



F71-0164
147 二位13A多功能五孔插座
147 Double 5 pin multi-function
socket
¥:312.00



F71-0165
小板147型二位15A美标插
座
147 Double 15A triode flat
American standard socket
¥:310.00



F71-0166
小板147型二位15A美式
三极插座
147 Double 15A triode flat
American standard socket
¥:310.00



F71-0167
147 二位13A方角插座
147 Double 13A square corner
¥:276.00



F71-0168
147 二位15A圆形插座
147 Double 15A 3 round pins
socket
¥:310.00



F71-0169
小板147型二位13A带位多功
能五孔插座
147 type Double 13A dislocation
multi-function 5 hole socket
¥:332.00



F71-0170
147 二位10A二三极插座
147 Double position two and
three pole socket
¥:250.00



F71-0171
147 二位开关带二位13A方角插座
147 Two switch with double 13A
square corner socket
¥:285.00



F71-0172
147 二位开关带二位13A多功能
插座
147 two switch with double 13A
MF socket
¥:285.00



F71-0173
147 二位开关带二位五孔多功能
插座
147 Two switch and double 5 pin
MF socket
¥:315.00



F71-0174
147 二位开关带二位13A方角
插座(带指示灯)
147 two switch and double 13A
square corner socket with indicator
light
¥:295.00



F71-0175
147 二位开关带二位13A多功
能插座(带指示灯)
147 Two switch and double 13A
MF socket with light
¥:295.00



F71-0176
147 二位开关带二位13A方插+二
位USB (小板)
147 Two switch and double 13A
square corner socket+2USB
¥:385.00



F71-0177
147 二位开关带二位13A多功
能+二口USB (小板)
147 Two switch and double 13A
MF socket+2USB
¥:385.00



F71-0178
147 二位开关带二位13A方插+
USB/type-c
147 two switch double 13A square
band lamp+USB/type-c
¥:385.00































































F71-0179
147 二位开关带二位13A多功
能带+USB/type-c
147 two switch double 13A MF
band lamp+USB/type-c
¥:385.00



F71-0180
147 二位开关带二位15A圆形插
座(带指示灯)
147 Two switch and double 15A 3
round pins socket with indicator light
¥:326.00

F71 Class champagne gold

F71 玻璃香槟金

	F71-0181 小板147型二位开关二位13A方角插座(带指示灯) 147 two switch with double 13A square angle socket (with indicator light) ¥:326.00		F71-0191 147型二位带USB+type-c(模块) 147 double German + USB / type-C (module) ¥:510.00		F71-0201 147二位开关带二位13A多功能五孔插座+2USB(带指示灯) 147 two position switch with two position 13A multifunction five hole socket + 2 USB (with indicator) ¥:580.00		F71-0211 147一开单控带13A方角插座+双USB 147 one gang 1 way socket with 13A square angle socket + 2USB ¥:348.00		F71-0221 147二开单控带16A多功能插座 147 type double open single control 16A MF pin socket ¥:276.00		F71-0231 147型二位16A德式插座带16A多功能插座 147 double computer with 16A MF pin socket ¥:333.00
	F71-0182 147型二位剃须插座 147 two shaving socket ¥:680.00		F71-0192 147型二位法式带USB+type-c(模块) 147 double French + USB / type-C (module) ¥:510.00		F71-0202 147二位13A多功能五孔插座+四位USB 147 13A double 5 pin multi-function socket+4USB ¥:460.00		F71-0212 147一开单控带15A泰式插座 147 one open single control with 15A Thai socket ¥:283.00		F71-0222 147型二开单控带13A方角插座 147 type double open single control socket with 13A square angle ¥:276.00		F71-0232 147型二位16A德式插座带防水 147 two position 16A German socket with waterproof ¥:350.00
	F71-0183 147 45A开关+一位开关16A多功能插座(带指示灯) (厨房专用开关) 147 kitchen switch ¥:415.00		F71-0193 二位17A德式+二位USB(小板连接) 147 Double German with 2USB ¥:410.00		F71-0203 147二位开关+二位13A多功能五孔插座+四位USB 147 two switch double 5 pin multi function socket+4USB ¥:480.00		F71-0213 147一开单控带多功能五孔+3USB插座 147 one open single control and MF 5 pin + 2USB socket ¥:348.00		F71-0223 147型10A二极带10A二极插座 147 type double 10A two pole with 10A two pole socket ¥:280.00		F71-0233 147型二位16A法式插座带防水 147 two position 16A French socket with waterproof ¥:350.00
	F71-0184 147 45A开关+一位开关13A方角插座(带指示灯)(组合厨房开关) 147 kitchen switch ¥:415.00		F71-0194 147二位16A法式+2USB(小板连接) 147 Double French with 2USB ¥:410.00		F71-0204 147型二开单控二位多功能五孔插座带USB+type-c 147 low switch and double 15A 3 way socket with indicator light ¥:550.00		F71-0214 147型二位10A二极五孔四位插座 147 double 10A 5 pin socket + 4 USB with indicator light ¥:440.00		F71-0224 147型二位一开单控带二位16A二极插座 147 type 2 gang 1 way switch double 16A two pole socket ¥:320.00		F71-0234 147二位开关二位16A德式插座带指示灯+USB+type-c(小板) 147 double switch double German socket+USB/type-c with light ¥:550.00
	F71-0185 147 45A开关+一位开关13A方角插座(厨房开关) 147 kitchen switch ¥:415.00		F71-0195 147四位USB插座 147 4 USB socket ¥:530.00		F71-0205 147型二位开关带二位13A多功能插座(带指示灯) 147 two switch and double 13A MF +4USB socket (with indicator light) ¥:480.00		F71-0215 147型二位13A多功能带四位USB带小开关 147 double 13A 3pin multi-function socket + 4USB with small switch ¥:480.00		F71-0225 147型二位一开单控带二位10A二极插座 147 type 2 gang 1 way switch double 10A 5 pole socket ¥:320.00		F71-0235 147二位开关二位16A法式插座带指示灯+USB+type-c(小板) 147 double switch double french socket+USB/type-c with light ¥:550.00
	F71-0186 147 45A双联开关带指示灯 147 type 45A bipolar switch ¥:360.00		F71-0196 147二位多功能插座+4USB 147 2-bit multi-function socket + 4USB ¥:460.00		F71-0206 147型一开带二位13A方角插座四位USB 147 double 13A square plug with 4USB with small switch ¥:480.00		F71-0216 147型二位13A方角插座四位USB带小开关 147 double 13A square plug with 4USB with small switch ¥:480.00		F71-0226 147型10A二极带10A二极插座(带指示灯) 147 type double 10A 5 pole socket USB + type-c 2.1A 147型10A 5 pole MF socket USB + type-c 2.1A 147型二位10A二极插座带USB+type-c 4A 147 type double 10A 5 pole socket USB + type-c 4A		F71-0236 147二位开关二位16A德式插座(带指示灯) 147 two switch double 16A German socket with light ¥:365.00
	F71-0187 147 16A二位德式插座 147 Double German socket ¥:326.00		F71-0197 147二位13A方角插座+4USB 147 two bit 13A square socket +4USB ¥:460.00		F71-0207 147二位13A方角插座四位USB 147 type double position 13A square inserting band 4 USB ¥:460.00		F71-0217 147二位一开16A多功能带指示灯 147 low switch and double 16A MF 3 pin socket with neon ¥:326.00		F71-0227 147型二位多功能五孔插座(带指示灯) 147 type double 5 pin MF socket USB + type-c 4A 147型二位多功能五孔插座(带指示灯) 147 type double 5 pin MF socket USB + type-c 4A		F71-0237 147二位开关二位16A法式插座(带指示灯) 147 two switch double 16A French socket with light ¥:365.00
	F71-0188 147 16A二位法式插座 147 Double French socket ¥:326.00		F71-0198 147一位13A方角插座+二位USB 13A square corner socket and two USB ¥:418.00		F71-0208 147二位13A多功能+4USB(带盖) 147 double 13A multi-function + 4USB (with cover plate) ¥:530.00		F71-0218 147一位多功能带四位USB 147 type multi-functional 4 USB ¥:460.00		F71-0228 147型13A多功能双USB带五位孔插座 147 type 13A multi-function 2USB with 5 pin multi-functional socket ¥:480.00		F71-0238 147二位开关二位16A德式插座带指示灯+二位USB(小板) 147 two switch double 16A German socket + 2usb with light ¥:450.00
	F71-0189 147 16A二位德式插座 147 Double German socket ¥:326.00		F71-0199 147一位16A多功能插座+二位USB插座 16A MF 3 pin socket and 2USB socket ¥:418.00		F71-0209 147型二位13A方角插座四位USB(带指示灯) 147 double 13A square inserting +4USB socket ¥:530.00		F71-0219 147 16A多功能+万用五孔插座 147 16A MF 3 pin +MF 5 pin socket ¥:295.00		F71-0229 147型二位电脑插座带二位USB插座 147 type double computer with 2USB socket ¥:460.00		F71-0239 147二位开关二位16A法式插座带指示灯+二位USB(小板) 147 two switch double 16A French socket + 2USB with light ¥:450.00
	F71-0190 147 16A二位法式插座 147 Double French socket ¥:326.00		F71-0200 147型二位开关带二位多功能五孔插座带双USB 147 low switch and double 13A 5 pin multi purpose socket+2USB ¥:415.00		F71-0210 147一开单控带13A多功能五孔插座 147 1 gang 1 way switch with 13A 5 pin MF socket ¥:274.00		F71-0220 147 10A二二二极插座 10A 8 pole socket ¥:310.00		F71-0230 147型电话带二位电脑插座 147 double telephone with double computer socket ¥:390.00		F71-0240 147型二位空白面板 147 Blank plate ¥:385.00



天猫直连 Tmall direct link
蓝牙配对 Bluetooth pairing
APP控制 App control
语音控制 Voice control
智能联动 Intelligent linkage

F71 玻璃爵士黑
Glass jazz black



F71 Baking paint gray 玻璃爵士黑

F71-0001
一位触摸开关(零火线)
1 gang 1 way touch switch
蓝芽WiFi一位触摸开关(零火线)
1 gang 1 way touch switch
涂鸦Zigbee一位触摸开关(零火线)
1 gang 1 way touch switch

¥:400.00
¥:500.00
¥:600.00

F71-0002
一位触摸开关(零火线)
2 gang 1 way touch switch
蓝芽WiFi二位触摸开关(零火线)
2 gang 1 way touch switch
涂鸦Zigbee二位触摸开关(零火线)
2 gang 1 way touch switch

¥:450.00
¥:550.00
¥:650.00

F71-0003
三位触摸开关(零火线)
3 gang 1 way touch switch
蓝芽WiFi三位触摸开关(零火线)
3 gang 1 way touch switch
涂鸦Zigbee三位触摸开关(零火线)
3 gang 1 way touch switch

¥:500.00
¥:600.00
¥:700.00

F71-0004
四位触摸开关(零火线)
4 gang 1 way touch switch
蓝芽WiFi四位触摸开关(零火线)
4 gang 1 way touch switch
涂鸦Zigbee四位触摸开关(零火线)
4 gang 1 way touch switch

¥:550.00
¥:650.00
¥:750.00

F71-0005
调光开关(零火线)
Dimming switch (zero live wire)
WiFi调光开关
WiFi dimming switch
Zigbee调光开关
Zigbee dimming switch

¥:600.00
¥:700.00
¥:800.00

F71-0006
调速开关(零火线)
Speed control switch (zero live line)
WiFi调速开关
WiFi speed control switch
Zigbee调速开关
Zigbee speed control switch

¥:600.00
¥:700.00
¥:800.00

F71-0007
窗帘开关(零火线)
Curtain switch (zero live wire)
WiFi窗帘开关
WiFi curtain switch
Zigbee窗帘开关
Zigbee curtain switch

¥:600.00
¥:700.00
¥:800.00

F71-0008
大板一位开关16A多功能插座
1 gang switch and 3 pin multi-purpose socket
¥:163.00

F71-0009
大板一位开关13A方角插座
1 gang switch and 13A square pin socket
¥:158.00

F71-0010
大板一位开关16A多功能带二位USB
1 gang switch with 16A 3pin multi-function with 2USB
¥:290.00

F71-0011
一位开关+USB带13A方角插座
1 gang switch and 13A square pin socket
¥:295.00

F71-0012
小板16A一位开关单控
16A 1 gang 1 way switch
¥:118.00
小板16A一位开关双控
16A 1 gang 2 way switch
¥:121.00
小板16A一位开关多控
16A 1 gang more way switch
¥:158.00

F71-0013
小板16A二位开关单控
16A 2 gang 1 way switch
¥:138.00
小板16A二位开关双控
16A 2 gang 2 way switch
¥:144.00
小板16A二位开关多控
16A 2 gang more way switch
¥:210.00

F71-0014
小板16A三位开关单控
16A 3 gang 1 way switch
¥:158.00
小板16A三位开关双控
16A 3 gang 2 way switch
¥:167.00

F71-0015
小板16A四位开关单控
16A 4 gang 1 way switch
¥:178.00
小板16A四位开关双控
16A 4 gang 2 way switch
¥:190.00

F71-0016
小板16A三位开关多控
Small panel 16A 3 gang 3 way switch
¥:230.00

F71-0017
小板16A窗帘门帘升降开关
lower window filter switch
¥:175.00

F71-0018
小板16A门控开关
gating switch
¥:142.00

F71-0019
小板16A英式门控开关
British gating switch
¥:142.00

F71-0020
小板16A门铃开关
doorbell switch
¥:142.00

F71-0021
小板16A拨动一位开关单控
1 gang 1 way toggle switch
¥:175.00
小板16A拨动一位开关双控
1 gang 2 way toggle switch
¥:180.00

F71-0022
小板16A拨动二位开关单控
2 gang 1 way toggle switch
¥:190.00
小板16A拨动二位开关双控
2 gang 2 way toggle switch
¥:200.00

F71-0023
小板16A拨动三位开关单控
3 gang 1 way toggle switch
¥:205.00
小板16A拨动三位开关双控
3 gang 2 way toggle switch
¥:220.00

F71-0024
小板16A拨动四位开关单控
4 gang 1 way toggle switch
¥:220.00
小板16A拨动四位开关双控
4 gang 2 way toggle switch
¥:240.00

F71-0025
小板16A双极开关带指示灯
20A switch with indicator light
¥:187.00
小板45A双极开关带指示灯
45A switch with indicator light
¥:226.00

F71-0026
小板45A双极开关带指示灯
45A switch with indicator light
¥:226.00

F71-0027
小板16A窗帘门帘升降开关
Shutter reset switch
¥:195.00

F71-0028
小板16A德式插座
German socket
¥:163.00

F71-0029
小板16A法式插座
French socket
¥:163.00

F71-0030
小板16A俄式插座
Russian socket
¥:163.00

F71-0031
小板16A以色列插座
Israel socket
¥:175.00

F71-0032
小板16A意大利+德式插座
Italy+German socket
¥:175.00

F71-0033
大板16A三极插座
16A 3 pole socket
¥:130.00

F71-0034
大板10A三极插座
10A 3 pole socket
¥:125.00

F71-0035
大板10A位二三极插座
10A two or three pole socket
¥:130.00

F71-0036
大板10A二三极插座
10A 7 pole socket
¥:135.00

F71-0037
小板16A一位开关单控带16A三极插座
1 gang 1 way switch and 16A 3 pole socket
¥:160.00
小板16A一位开关双控带16A三极插座
1 gang 2 way switch and 16A 3 pole socket
¥:163.00

F71-0038
大板一位开关单控带10A二三极插座
1 gang 1 way switch and 5 pole socket
¥:160.00
大板一位开关双控带10A二三极插座
1 gang 2 way switch and 5 pole socket
¥:163.00

F71-0039
小板10A一位开关单控带二三极插座
2 gang 1 way switch and 5 pole socket
¥:180.00
小板10A二位开关双控带二三极插座
2 gang 2 way switch and 5 pole socket
¥:186.00

F71-0040
小板16A泰式插座
10A 2 pole socket
¥:140.00

F71-0041
小板10A二位插座
10A Double 2 pole socket
¥:155.00

F71-0042
小板10A一位开关带二位插座
1 gang switch and 2 pole socket
¥:155.00

F71-0043
小板10A一位开关带二位插座
1 gang switch and 4 pole socket
¥:165.00

F71-0044
小板16A多功能三极插座
16A 3 pin universal socket
¥:138.00

F71-0045
小板13A三极多功能插座
5 pin multi-function socket
¥:156.00

F71-0046
小板13A三极多功能插座
5 pin multi-function socket
¥:166.00

F71-0047
小板13A方角插座
13A square corner socket
¥:138.00

F71-0048
小板13A圆角插座
15A 3 round pins socket
¥:155.00

F71-0049
小板15A标准三极插座
15A triode flat American standard socket
¥:158.00

F71-0050
小板16A法式插座带三极插座
15A Thai type multi-function 3 pole socket
¥:158.00

F71-0051
小板带位泰式六孔插座
Dislocation Thai 6 pin socket
¥:165.00

F71-0052
小板一位开关带13A方角插座
1 gang switch and 13A square pin socket
¥:158.00

F71-0053
小板一位开关带15A圆孔插座
1 gang switch and 15A 3 round pins socket
¥:163.00

F71-0054
小板一位开关带16A多功能插座
1 gang switch and 3 pin MF socket
¥:163.00

F71-0055
小板一位开关带13A方角插座
(带指示灯)
1 gang switch and 13A square pin socket
¥:158.00

F71-0056
小板一位开关带15A圆孔插座
(带指示灯)
1 gang switch and 15A 3 round pins socket
¥:163.00

F71-0057
小板一位开关带16A多功能插座
(带指示灯)
1 gang switch and 3 pin MF socket(with neon)
¥:163.00

F71-0058
小板一位开关带13A多功能五孔插座
(带指示灯)
1 gang switch and 5 pin multi-function socket
¥:178.00

F71-0059
小板16A德式插座带二位USB
2 USB with German socket
¥:255.00

F71-0060
小板16A法式插座带二位USB
2 USB with French socket
¥:255.00

F71 Baking paint gray 玻璃爵士黑



F71-0061
小板16A德式插座+USB/Type-c
Small board 16A German socket
+ USB / type-c
¥:230.00



F71-0062
小板16A法式插座+USB/Type-c
Small board 16A French socket
+ USB / type-c
¥:230.00



F71-0063
小板16A一位开关带德式插座
1 gang German socket
¥:175.00



F71-0064
小板16A一位开关带法式插座
1 gang French socket
¥:175.00



F71-0065
小板16A德式插座带防水
German socket and Waterproof belt
¥:175.00



F71-0066
小板16A法式插座带防水
French socket and Waterproof belt
¥:175.00



F71-0067
小板二位USB带13A方角插座(横)
2 USB with 13A square corner
socket with switch
¥:230.00



F71-0068
小板16A标准插座带USB+TYPE-C
American Standard with USB+type-C
¥:230.00



F71-0069
小板16A泰式插座带USB+TYPE-C
15A Thai MF socket with USB+type-C
¥:230.00



F71-0070
小板二位USB带13A方角插座
(带保护门)
2 USB with 13A square corner
socket with flip cover
¥:265.00



F71-0071
小板二位USB带13A多功能插座
(带保护门)
2 USB with 13 pin multi-purpose
socket with flip cover
¥:265.00



F71-0072
小板一位开关带二位USB带
13A多功能插座(带指示灯)
1 gang switch with two USB and
13A multi-function socket
¥:240.00



F71-0073
小板一位开关带二位USB带
13A方角插座(带指示)
2 USB with 13A square corner
socket with flip cover
¥:240.00



F71-0074
小板13A多功能带Type-C+USB
13A multi-function with type-C
+ USB
¥:230.00



F71-0075
小板13A方角带type-c+USB
13A square angle band type-C
+ USB
¥:230.00



F71-0076
小板一位开关带13A多功能插座带
Type-c+USB(带指示灯)
1 gang switch 13A multi-purpose
socket with Type-c+USB(with light)
¥:240.00



F71-0077
小板二位USB带13A多功能插座
带开关(竖)
2 USB with Three very multi-purpose
socket with switch
¥:240.00



F71-0078
小板一位开关13A方角插带
Type-c+USB(带指示灯)
1 gang switch 13A square insert belt
Type-c+USB(with light)
¥:240.00



F71-0079
小板二位USB带13A方角插座
带开关(竖)
2 USB with 13A square corner
socket with switch
¥:240.00



F71-0080
小板15A泰式多功能插座带二
位USB
15A Thai multi-function socket
with 2-bit USB
¥:230.00



F71-0081
小板15A泰式+2USB
15A Thai + 2USB
¥:230.00



F71-0082
小板二位USB带13A多功能插座(横)
2 USB with 13 pin multi-purpose
socket
¥:230.00



F71-0083
小板二位USB带10A二极插座
2 USB and 5 pin socket
¥:220.00



F71-0084
小板二位USB带10A二极
插座带开关
2 USB and 5 pin socket with switch
¥:230.00



F71-0085
10A二极五孔带USB+TYPE-C 2 1A
10A 5 pole socket with USB+type-c 2 1A
¥:240.00
10A二极五孔带USB+TYPE-C 4A
10A 5 pole socket with USB+type-c 4A
¥:360.00



F71-0086
小板一位开关带13A多功能五孔
插座带USB
1 gang switch and 5 pin multi-function
socket with USB and indicator light
¥:290.00



F71-0087
小板13A二位USB带多功能五孔插座
2 USB with 5 pin multi-function
socket
¥:230.00



F71-0088
小板13A二位USB带多功能五孔
插座带开关
2 USB with 5 pin multi-function
socket with switch
¥:240.00



F71-0089
小板13A多功能五孔带USB+TYPE-C 2 1A
13A MF 5 pin socket with USB+type-c 2 1A
¥:240.00
小板13A多功能五孔带USB+TYPE-C 4A
13A MF 5 pin socket with USB+type-c 4A
¥:360.00



F71-0090
小板一位电视插座
TV socket
¥:155.00



F71-0091
小板一位电话插座 ¥:155.00
小板一位电脑插座 ¥:165.00
小板一位电视插座(超六类) ¥:218.00
computer socket(t)



F71-0092
小板双电视插座 ¥:175.00
Two TV socket



F71-0093
小板双电话插座 ¥:175.00
Two telephone socket
小板双电脑插座 ¥:195.00
Two computer socket
小板双电视插座(超六类) ¥:245.00
Two computer socket(t)



F71-0094
小板电视电脑插座 ¥:185.00
TV + computer socket
小板电视电话插座 ¥:235.00
小板电视电脑插座(超六类) ¥:235.00
TV + computer socket(t)



F71-0095
小板双电话带USB插座 ¥:320.00
TE1 + USB socket
小板电脑带USB插座 ¥:320.00
computer + USB socket
小板电脑带USB插座(超六类) ¥:370.00
computer + USB socket(t)



F71-0096
小板一位TV+FM
TV and FM
¥:230.00



F71-0097
小板一位卫星插座
Satellite socket
¥:165.00



F71-0098
小板二位卫星插座
Double satellite socket
¥:195.00



F71-0099
小板卫星+电视插座
Satellite and TV socket
¥:185.00



F71-0100
小板卫星带电话插座 ¥:185.00
Satellite and telephone socket
小板卫星带电视插座 ¥:195.00
Satellite and computer socket
小板卫星带电视插座(超六类) ¥:245.00
Satellite and computer socket(t)



F71-0101
小板二极插座带电视插座
2 pin socket with TV
¥:320.00



F71-0102
小板二极插座带电话插座 ¥:320.00
2 pin socket with telephone
小板二极插座带电脑插座 ¥:320.00
2 pin socket with computer
小板二极插座带电视插座(超六类) ¥:370.00
2 pin socket with computer



F71-0103
小板一位光纤插座
Optical fiber socket
¥:195.00



F71-0104
小板二位USB插座
Double USB socket
¥:265.00



F71-0105
小板单音频插座
Single audio socket
¥:225.00



F71-0106
小板双音频插座
Double audio socket
¥:305.00



F71-0107
触摸延时开关(节能)
Touch delay delay switch
(energy saving)
¥:225.00



F71-0108
声光控制延时开关(节能)
Sound-light controlled delay switch
(energy saving)
¥:225.00



F71-0109
红外光线人体感应开关
Human body induction
¥:300.00



F71-0110
凹陷地脚灯(亮光/暗光)
The footlights
¥:260.00



F71-0111
凹陷红外线人体感应地脚灯(亮光/暗光)
The human body induction footlights
¥:330.00



F71-0112
平面地脚灯(亮光/暗光)
Footlights
¥:260.00



F71-0113
叮咚门铃
Ding dong doorbell
¥:291.00



F71-0114
机械式40A插卡取电 ¥:320.00
Mechanical card for electricity
高频式低频率40A插卡取电 ¥:490.00
Low frequency induction card
for electricity
高频式高频率40A插卡取电 ¥:590.00
High frequency induction card
for electricity



F71-0115
紧急呼叫开关
Emergency call switch
¥:280.00



F71-0116
请勿打扰请即清理门铃开关
(按钮式)
Do not disturb, please namely cleaning
please + later doorbell "button"
¥:323.00



F71-0117
请勿打扰门铃开关
(按钮式)
Do not disturb + doorbell "button"
¥:475.00



F71-0118
请勿打扰即清理门铃开关
(按钮式)
Do not disturb please
namely cleaning please
¥:475.00



F71-0119
智能音乐控制开关
Intelligent music control switch
¥:750.00



F71-0120
温度控制调节开关
Temperature control switch
¥:780.00

F71 Baking paint gray 玻璃爵士黑



F71-0121
温度控制调节开关
Temperature control switch
¥:930.00



F71-0122
调音开关
Tuning switch
¥:300.00



F71-0123
调光开关300W
Dimming 300W ¥:220.00
调光开关600W
Dimming 600W ¥:250.00
调光开关1000W
Dimming 1000W ¥:280.00



F71-0124
调速开关300W
Speed 300W ¥:220.00
调速开关600W
Speed 600W ¥:250.00
调速开关1000W
Speed 1000W ¥:280.00



F71-0125
一位开关带调光500W
1 gang with dimmer switch
¥:235.00



F71-0126
一位开关带调速500W
1 gang with speed switch
¥:235.00



F71-0127
13A开关带保险丝 (带指示灯)
13A switch with fuse(with neon)
¥:265.00



F71-0128
20A出线柱
20A outgoing post
¥:245.00



F71-0129
剃须插座
Shaving socket
¥:500.00



F71-0130
USB+电脑插座+无线路由
USB+computer socket wireless router
¥:900.00



F71-0131
蓝牙+3.5音频+二位USB+HDMI
Bluetooth audio+3.5+USB+HDMI
¥:5300.00



F71-0132
HDMI
¥:320.00



F71-0133
USB+TYPE-C
¥:360.00



F71-0134
HDMI+USB
¥:320.00



F71-0135
HDMI+USB+3.5音频
HDMI+USB+3.5
¥:320.00



F71-0136
VGA+USB+3.5音频
VGA+USB+3.5
¥:320.00



F71-0137
AV+3.5音频
AV+3.5
¥:320.00



F71-0138
VGA+AV音频接口
VGA+AV audio interface
¥:320.00



F71-0139
HDMI+AV音频接口
HDMI+AV audio interface
¥:320.00



F71-0140
二分之一AV音频+卫星
Half AV audio interface+
Satellite socket
¥:320.00



F71-0141
二分之一AV音频+USB+3.5音频
Half AV audio interface+USB+3.5
¥:320.00



F71-0142
二分之一VGA+TV
Half VGA+TV
¥:320.00



F71-0143
二分之一VGA+电脑插座
Half VGA+computer socket
¥:320.00



F71-0144
VGA+USB
¥:320.00



F71-0145
VGA+HDMI
¥:320.00



F71-0146
45A出线柱
45A Outlet
¥:275.00



F71-0147
德式插座带开关 (WIFI版)
German socket with switch
(WIFI version)
¥:670.00



F71-0148
法式插座带开关 (WIFI版)
French socket with switch
(WIFI version)
¥:670.00



F71-0149
13A多功能插座带开关 (WIFI版)
13A multi-functional socket with switch
(WIFI version)
¥:700.00



F71-0150
13A方角插座带开关 (WIFI版)
13A square corner socket with switch
(WIFI version)
¥:700.00



F71-0151
空白面板
Blank plate
¥:113.00



F71-0152
大板147型二位双极开关带二位
13A方角插座
147 type two position bipolar switch
with double 13A square socket
¥:295.00



F71-0153
大板147型二位开关带二位13A多
功能插座
147 two switch and double 13A
multi-purpose socket
¥:295.00



F71-0154
大板147型二位双极开关带13A
方角+二位USB
147 two bipolar switch and double
13A square plug+2USB
¥:435.00



F71-0155
大板147型二位开关带二位13A多功
能+二位USB
147 two switch and double 13A
MF+2USB socket
¥:435.00



F71-0156
小板147型二位开关单控
147 2 gang 1 way switch
¥:242.00
小板147型二位开关双控
147 2 gang 2 way switch
¥:242.00



F71-0157
小板147型三位开关单控
147 3 gang 1 way switch
¥:256.00
小板147型三位开关双控
147 3 gang 2 way switch
¥:265.00



F71-0158
小板147型四位开关单控
147 4 gang 1 way switch
¥:276.00
小板147型四位开关双控
147 4 gang 2 way switch
¥:286.00



F71-0159
小板147型五位开关单控
147 5 gang 1 way switch
¥:296.00
小板147型五位开关双控
147 5 gang 2 way switch
¥:311.00



F71-0160
小板147型六位开关单控
147 6 gang 1 way switch
¥:311.00
小板147型六位开关双控
147 6 gang 2 way switch
¥:324.00



F71-0161
小板147型七位开关单控
147 7 gang 1 way switch
¥:336.00
小板147型七位开关双控
147 7 gang 2 way switch
¥:357.00



F71-0162
小板147型八位开关单控
147 8 gang 1 way switch
¥:356.00
小板147型八位开关双控
147 8 gang 2 way switch
¥:380.00



F71-0163
147 二位16A多功能三极插座
147 Double 16A MF socket
¥:276.00



F71-0164
147 二位13A多功能五孔插座
147 Double 5 pin multi-function
socket
¥:312.00



F71-0165
小板147型二位15A美标扁
脚+二位USB
147 Double 15A triode flat
American standard socket
¥:310.00



F71-0166
小板147型二位15A美标
扁脚三极插座
147 Double 15A triode flat
American standard socket
¥:310.00



F71-0167
147 二位13A方角插座
147 Double 13A square corner
socket
¥:276.00



F71-0168
147 二位15A圆脚插座
147 Double 15A 3 round pins
socket
¥:310.00



F71-0169
小板147型二位13A错位多功能
五孔插座
147 type Double 13A dislocation
multi-function 5 hole-socket
¥:332.00



F71-0170
147 二位10A二极插座
147 Double position two and
three pole socket
¥:250.00



F71-0171
147 二位开关带二位13A多功能插
座
147 two switch and double 13A
MF socket
¥:285.00



F71-0172
147 二位开关带二位13A多功能插
座
147 two switch with double 13A
MF socket
¥:285.00



F71-0173
147 二位开关带二位五孔多功能插
座
147 two switch and double 5 pin
MF socket
¥:315.00



F71-0174
147 二位开关带二位13A方角插
座(带指示灯)
147 two switch and double 13A
square corner socket with indicator
light
¥:295.00



F71-0175
147 二位开关带二位13A多功
能插座 (带指示灯)
147 two switch and double 13A
MF socket with light
¥:295.00



F71-0176
147 二位开关带二位13A方角+二
位USB (小板)
147 two switch and double 13A
square corner socket+2USB
¥:385.00



F71-0177
147 二位开关带二位13A多功
能+二位USB (小板)
147 two switch and double 13A
MF socket+2USB
¥:385.00



F71-0178
147 二位开关带二位13A方角+二
位USB/Type-c
147 two switch double 13A square
band lamp+USB/Type-c
¥:385.00



F71-0179
147 二位开关带二位13A多功能插
座灯+USB/Type-c
147 two switch double 13A MF
band lamp+USB/Type-c
¥:385.00



F71-0180
147 二位开关带二位15A圆脚插
座(带指示灯)
147 two switch and double 15A 3
round pins socket with indicator light
¥:326.00

F71 Baking paint gray 玻璃爵士黑



F71-0181
小款147型二位开关带二位13A方角插座(带指示灯)
147 two switch with double 13A square angle socket (with indicator light)
¥:326.00



F71-0182
147型二位剃须插座
147 two shaving socket
¥:680.00



F71-0183
147 45A开关+一位开关16A多功能插座(带指示灯)
(厨房专用开关)
147 kitchen switch
¥:415.00



F71-0184
147 45A开关+一位开关13A方角插座(带指示灯)
(厨房专用开关)
147 kitchen switch
¥:415.00



F71-0185
147 45A开关+一位开关13A方角插座(带指示灯)
(厨房专用开关)
147 kitchen switch
¥:415.00



F71-0186
147 45A双极开关带指示灯
147 type-45A bipolar switch
¥:360.00



F71-0187
147 16A二位德式插座
147 Double German socket
¥:326.00



F71-0188
147 16A二位法式插座
147 Double French socket
¥:326.00



F71-0189
147 16A二位德式插座
147 Double German socket
¥:326.00



F71-0190
147 16A二位法式插座
147 Double French socket
¥:326.00



F71-0191
147型二位德式带USB+type-c(模块)
147 double German + USB / type-c (module)
¥:510.00



F71-0192
147型二位法式带USB+type-c(模块)
147 double French + USB / type-c (module)
¥:510.00



F71-0193
二位17A德式+二位USB(小板连接)
147 Double German with 2USB
¥:410.00



F71-0194
147二位16A法式+2USB(小板连接)
147 double French with 2USB
¥:410.00



F71-0195
147四位USB插座
147 4 USB socket
¥:530.00



F71-0196
147二位多功能插座+4USB
147 2-in-1 multi-function socket + 4USB
¥:460.00



F71-0197
147二位13A方角插座+4USB
147 two bit 13A square socket +4USB
¥:460.00



F71-0198
147一位13A方角插座+二位USB
13A square corner socket and two USB
¥:418.00



F71-0199
147一位16A多功能插座+二位USB插座
16A MF 3 pin socket and 2USB socket
¥:418.00



F71-0200
147型二位开关带二位多功能五孔插座带双USB
147 low switch and double 13A 5 pin multi-purpose socket+2USB
¥:415.00



F71-0201
147二位开关带二位13A多功能五孔插座+2 USB(带指示灯)
147 two position switch with two position 13A multi-function five hole socket + 2 USB (with indicator)
¥:580.00



F71-0202
147二位13A多功能五孔插座+四位USB
147 13A double 5 pin multi-function socket+4USB
¥:460.00



F71-0203
147二位开关带二位13A多功能五孔插座+四位USB
147 two switch double 5 pin multi-function socket+4USB
¥:480.00



F71-0204
147型一位开关带二位多功能五孔插座+USB+type-c
147 low switch and double 13A 3 round pins socket with indicator light
¥:550.00



F71-0205
147型二位13A多功能带四位USB(带指示灯)
147 two switch and double 13A MF +4USB socket (with indicator light)
¥:480.00



F71-0206
147型一位13A方角插座带四位USB
147 type two switch two position 13A square inserting band 4 USB
¥:480.00



F71-0207
147二位13A方角插座四位USB
147 type double position 13A square inserting band 4 USB
¥:460.00



F71-0208
147二位13A多功能+4USB(带盖板)
147 double 13A multi-function + 4USB (with cover plate)
¥:530.00



F71-0209
147型二位13A方角插座四位USB(带盖板)
147 double 13A square inserting +4USB socket
¥:530.00



F71-0210
147型一位开关带二位多功能五孔插座
147 1 gang 1 way switch with 13A 5 pin MF socket
¥:274.00



F71-0211
147一位单控带13A方角插座+双USB
147 1 gang 1 way socket with 13A square angle socket +2USB
¥:348.00



F71-0212
147型一位单控带15A泰式插座
147 one open single control with 15A Thai socket
¥:283.00



F71-0213
147型一位单控带多功能五孔+双USB插座
147 one open single control and MF 5 pin + 2USB socket
¥:348.00



F71-0214
147型一位10A二极五孔插座
147 double 10A 5 pin socket + 4 USB with indicator light
¥:440.00



F71-0215
147型二位13A多功能带四位USB插座
147 double 13A 3pin multi-function socket + 4USB with small switch
¥:480.00



F71-0216
147型一位13A方角插座带四位USB插座
147 type 2 double 13A square plug with 4USB with small switch
¥:480.00



F71-0217
147二位一位16A多功能带指示灯
147 low switch and double 16A MF 3 pin socket with neon
¥:326.00



F71-0218
147二位多功能四位USB插座
147 type multi-functional 3 pin socket band 4 USB
¥:460.00



F71-0219
147 16A多功能+万用五孔插座
147 16A MF 3 pin + MF 5 pin socket
¥:295.00



F71-0220
147 10A二二二极插座
10A 8 pole socket
¥:310.00



F71-0221
147二位单控带16A多功能插座
147 two switch single control 16A MF 3 pin socket
¥:276.00



F71-0222
147型二位单控带13A方角插座
147 type double open single control socket with 13A square angle
¥:276.00



F71-0223
147型10A二极带10A二极插座
147 10A two pole with 10A two pole socket
¥:280.00



F71-0224
147型一位单控带二位16A二极插座
147 type 2 gang 1 way switch double 16A three pole socket
¥:320.00



F71-0225
147型一位单控带二位10A二极插座
147 type 2 gang 1 way switch double 10A 5 pole socket
¥:320.00



F71-0226
147型一位10A二二二极插座+4USB带USB+type-c 2 1A
147 type double 10A 5 pole socket USB + type-c 2 1A
147型二位10A二二二极插座+4USB带USB+type-c 4A
147 type double 10A 5 pole socket USB + type-c 4A
¥:460.00
¥:720.00



F71-0227
147型二位多功能五孔插座+4USB带USB+type-c 2 1A
147 type double 5 pin MF socket USB + type-c 2 1A
147型二位多功能五孔插座+4USB带USB+type-c 4A
147 type double 5 pin MF socket USB + type-c 4A
¥:460.00
¥:720.00



F71-0228
147型13A多功能双USB带五孔插座
147 type 13A multi-functional USB with 5 pin multi-functional socket
¥:480.00



F71-0229
147型二位电脑插座带二位USB插座
147 type double computer with 2USB socket
¥:460.00



F71-0230
147型二位电话带二位电脑插座
147 double telephone with double computer socket
¥:390.00



F71-0231
147型二位电脑插座带16A多功能插座
147 double computer with 16A MF pin socket
¥:333.00



F71-0232
147型二位16A德式插座带防水
147 position 16A German socket with waterproof
¥:350.00



F71-0233
147型二位16A法式插座带防水
147 two position 16A French socket with waterproof
¥:350.00



F71-0234
147型一位开关带二位16A德式插座带指示灯+USB/type-c(小板)
147 double switch double German socket+USB/type-c with light
¥:350.00



F71-0235
147型一位开关带二位16A法式插座带指示灯+USB/type-c(小板)
147 double switch double French socket + USB/type-c with light
¥:350.00



F71-0236
147型一位开关带二位16A德式插座带指示灯
147 one switch double 16A German socket with light
¥:365.00



F71-0237
147型一位开关带二位16A法式插座带指示灯
147 two switch double 16A French socket with light
¥:365.00



F71-0238
147型二位开关带二位16A德式插座带指示灯+二位USB(小板)
147 two switch double 16A German socket + 2usb with light
¥:450.00



F71-0239
147型二位开关带二位16A法式插座带指示灯+二位USB(小板)
147 two switch double 16A French socket + 2USB with light
¥:450.00



F71-0240
147型二位空白面板
147 Blank plate
¥:385.00